



SN. 419433

Dr. Jekyll & Mr. Hyde®

THE EXHAUST

MANUAL : INDIAN® | SMARTBOX 2


**NEW IN THIS MANUAL:
- SMARTBOX POSITION**





Scout

1


Scout Smartbox 2





Assembly
kit

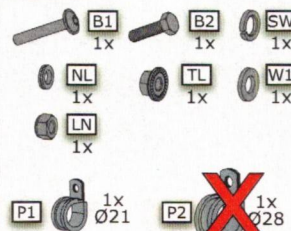

Smartbox
2

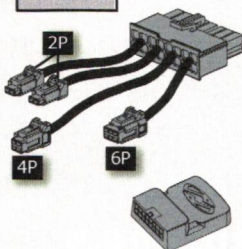

Mode Switch
for
Smartbox



Smartbox
Power
Cable




2

Re-use at
step 3





2x

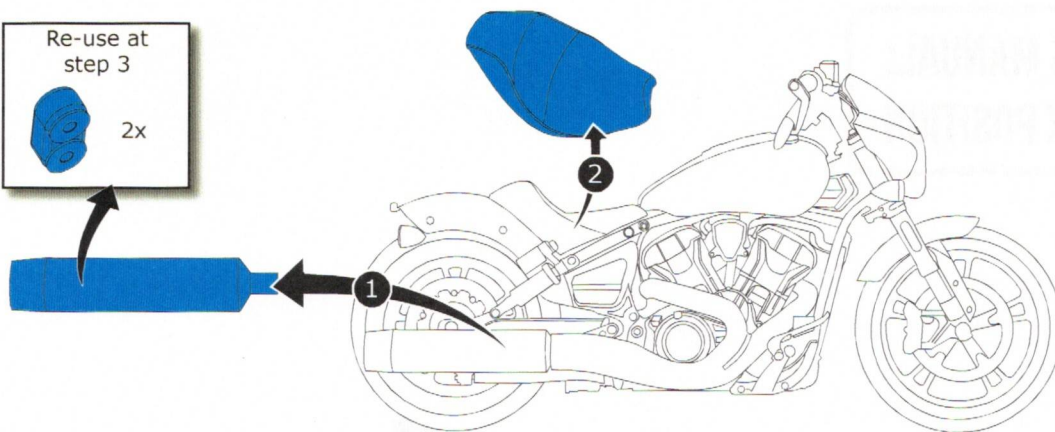


3

Install exhaust

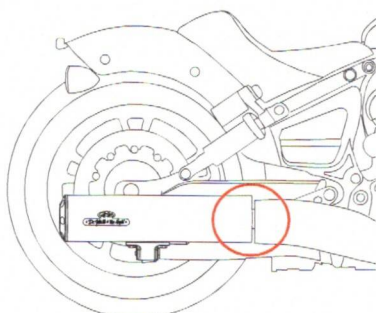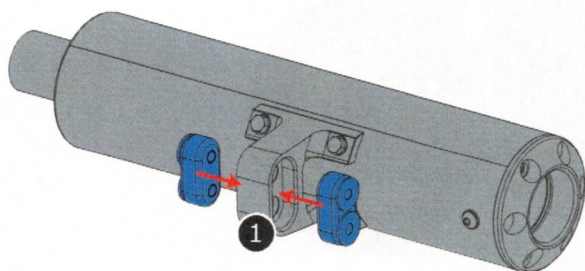




minimum gap between
heatshield & exhaust
= 2 mm

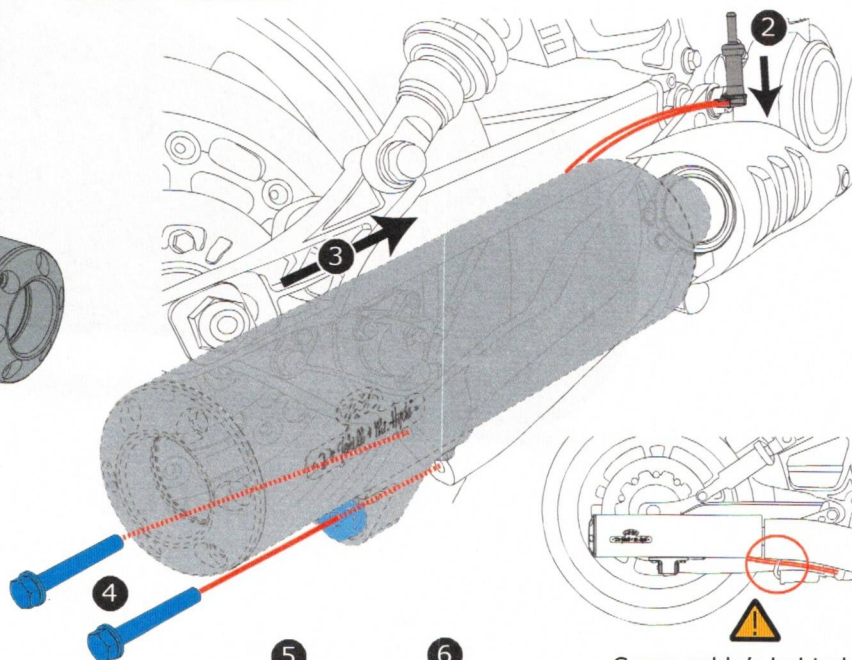


Serco cable's behind
oxygen sensor cable!

4


Mount servo

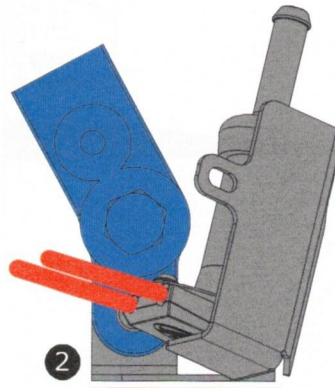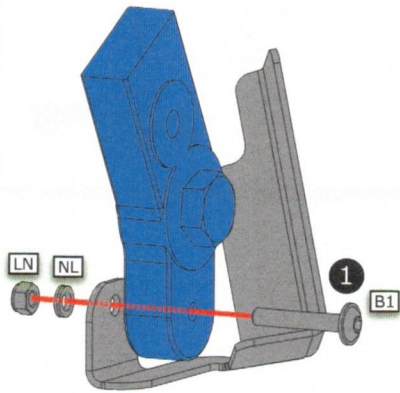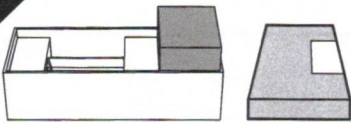

Install bracket level



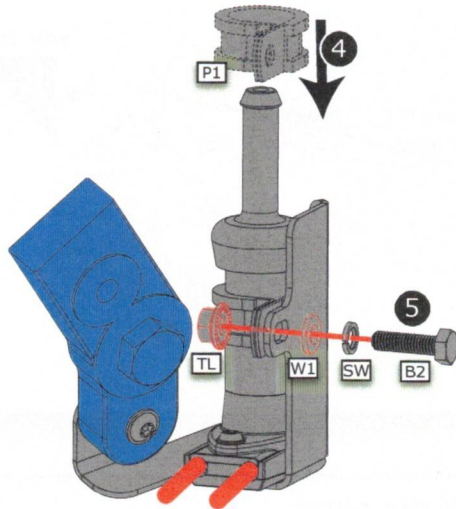


Finished result:

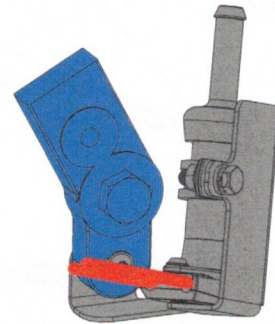


5

Servo cable routing

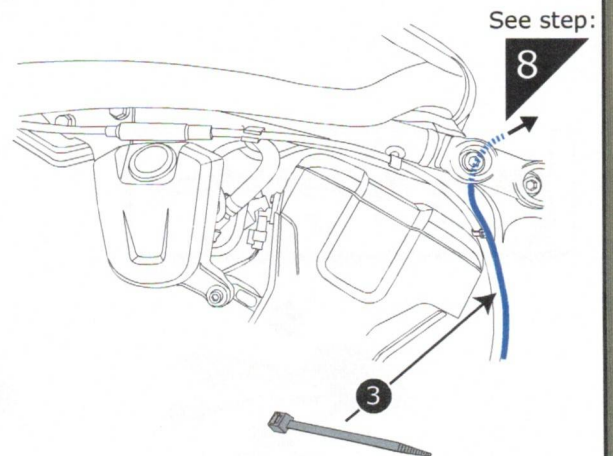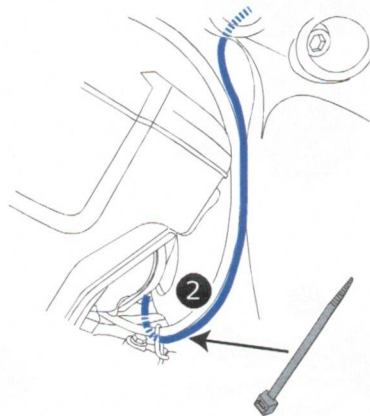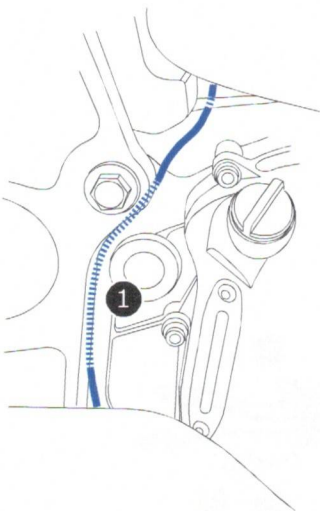


6

Mode switch installation

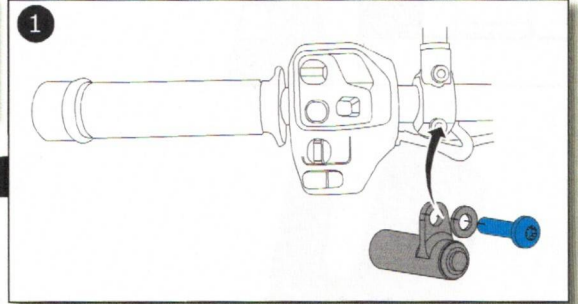

2
Stow away excess
cable behind cover
(remove & reinstall
cover)






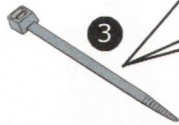


See step:



8

7

Connect all the plugs

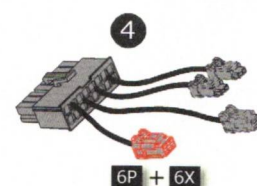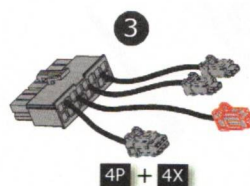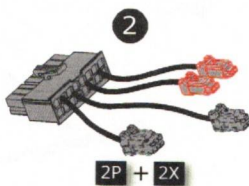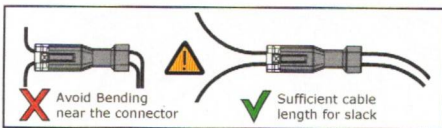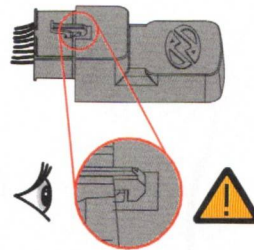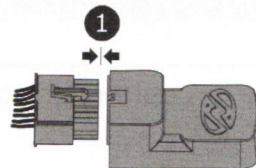

Place smartbox & attach power cable

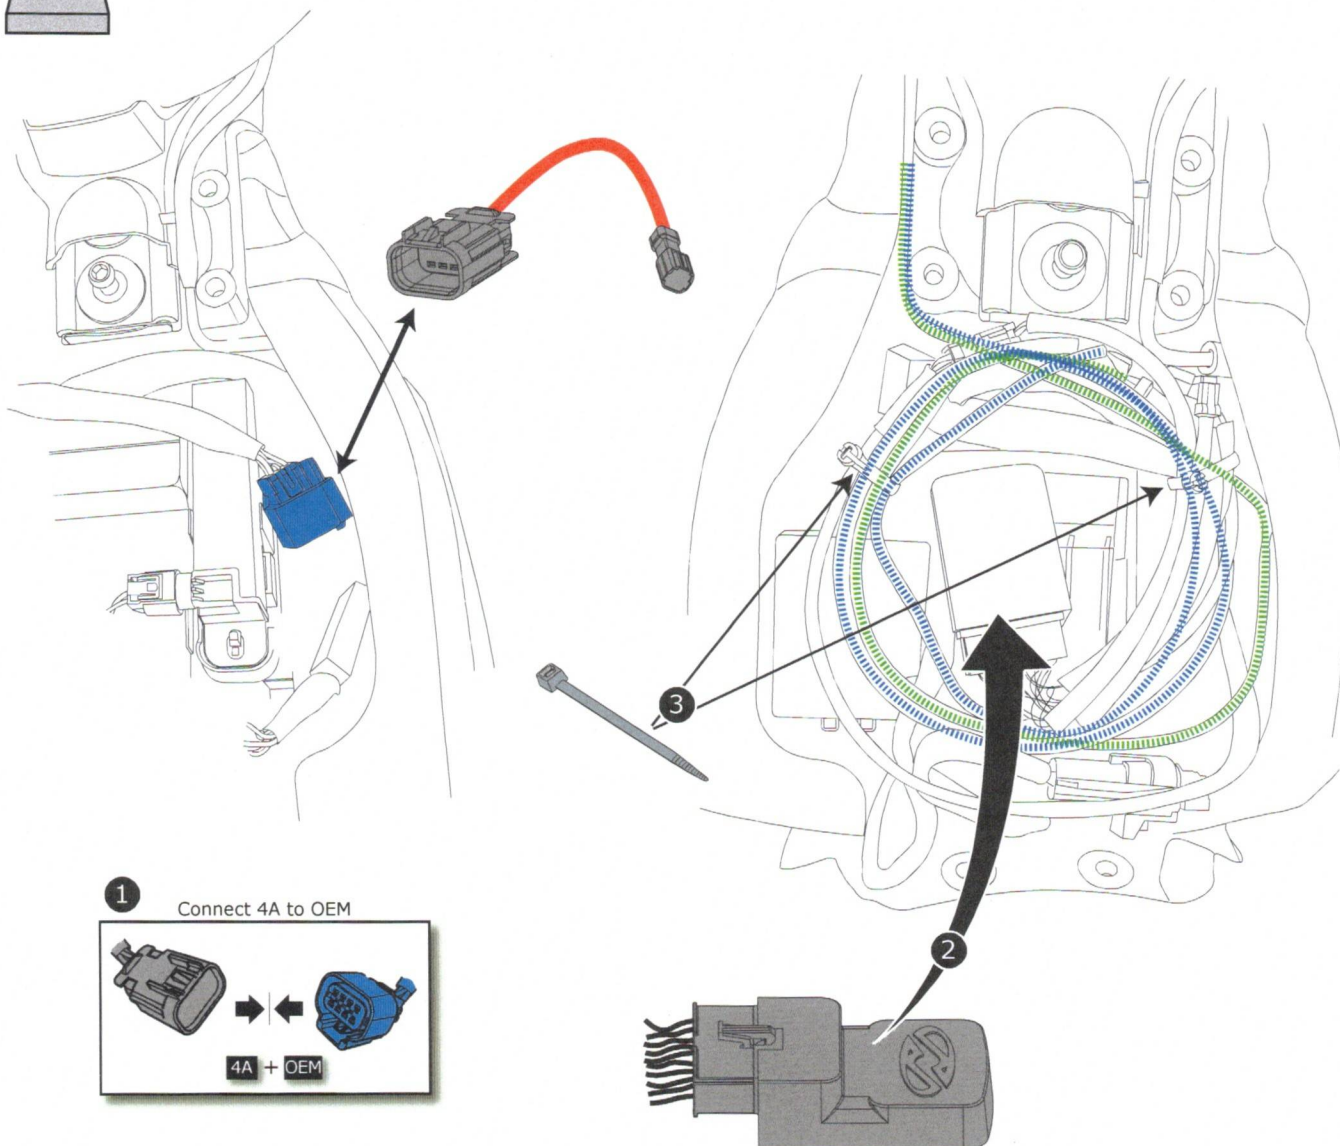

perform a
**Complete
System
Check!**

