


1

-Use protective clothing, goggles, gloves
-Follow safety precautions at all times

Cable Shorten Manual


Remove original cables

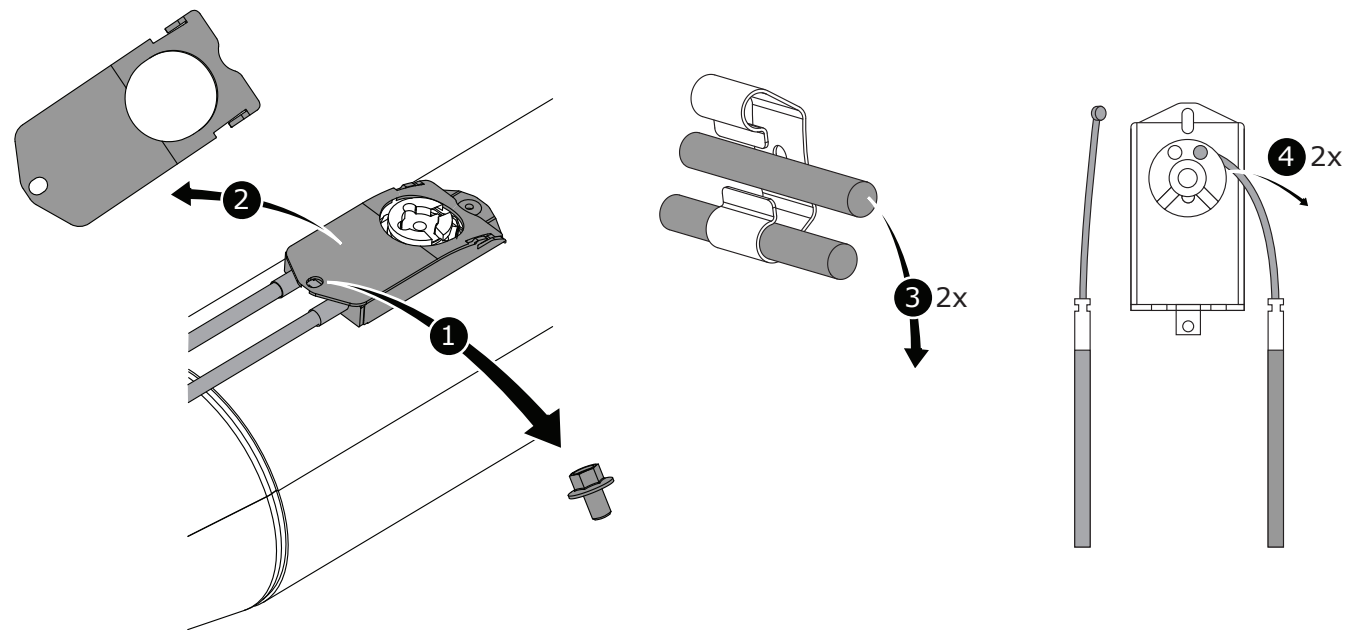

2



Determine cable lengths

1 Line up servomotors lid & housing as shown

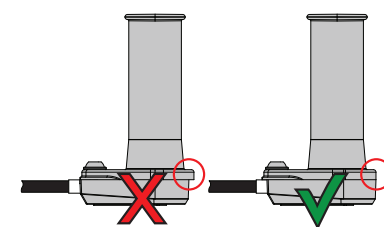


With outer cable connected

2 Place servomotors at the desired position on the motorcycle and secure them in place

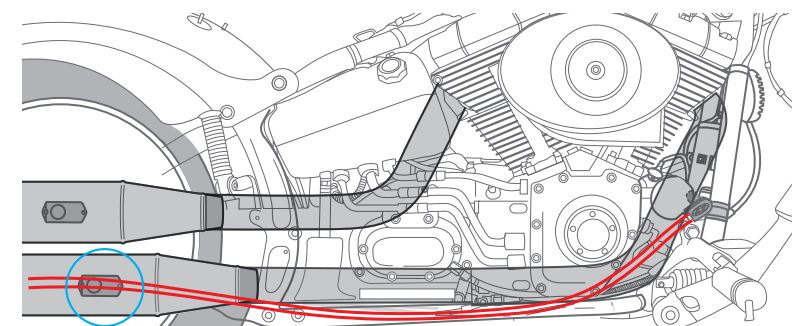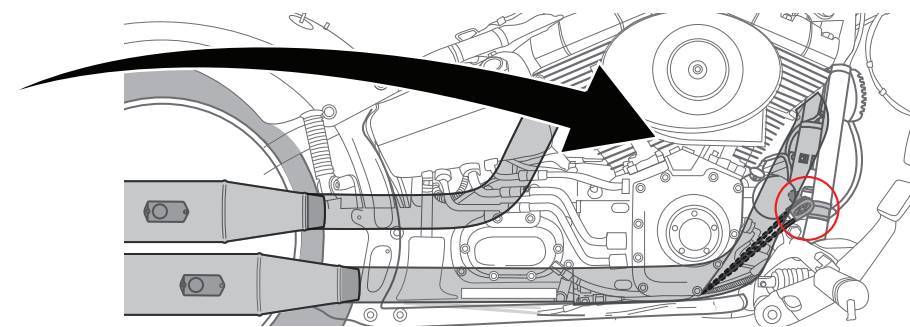


3 Determine outer cable routing

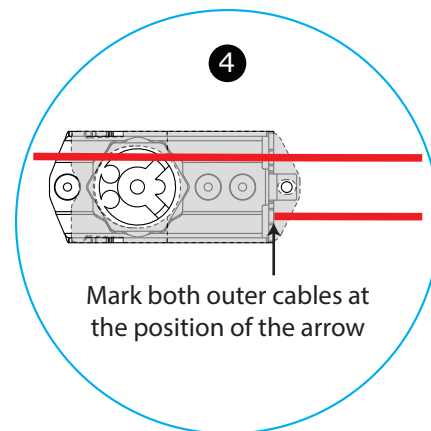

Mark both outer cables at the position of the arrow

3


Disassemble servo's

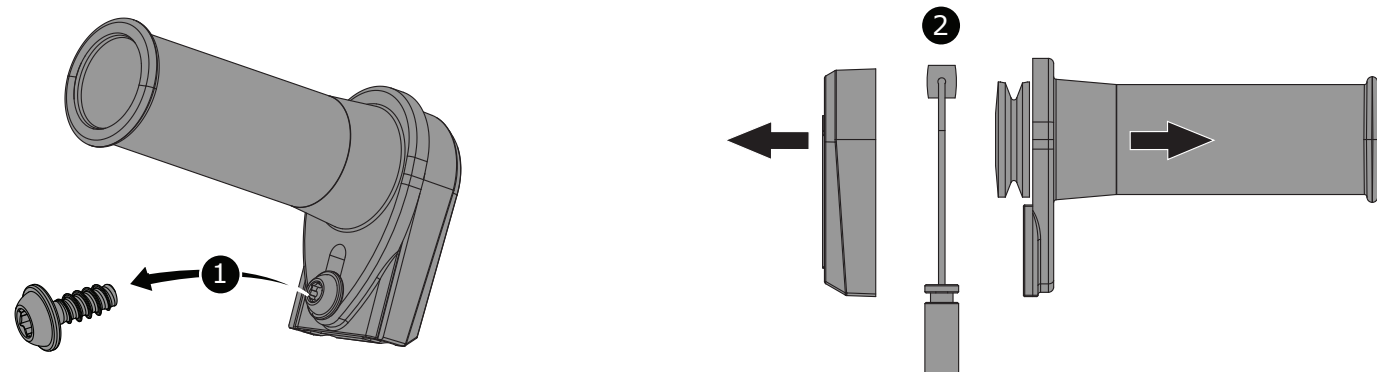


4

Shorten outer cables


1 Cut off both cable nipples

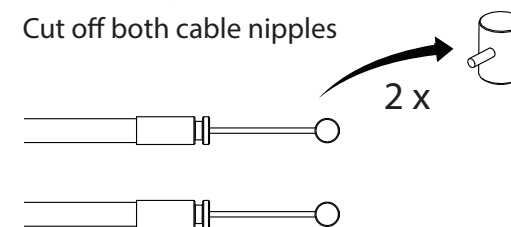

2 Remove outer cables

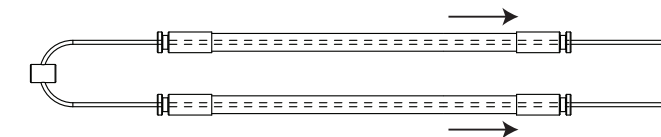


Cut, 2x

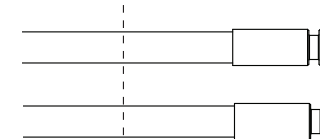


length of both cables may vary per servomotor

3 Cut or grind off outer cables at the mark (step 1.4)


5 Assemble cables (1/2)

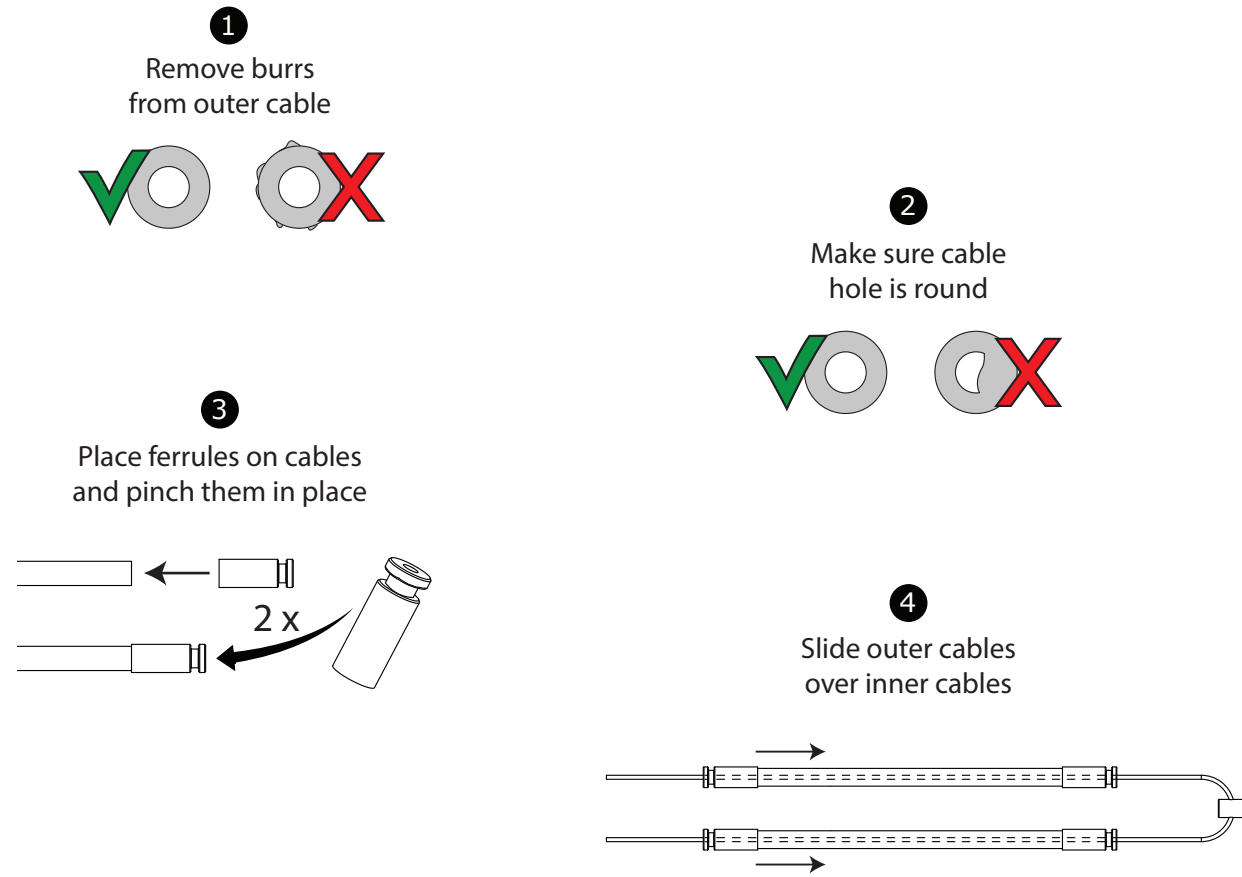

6 Assemble cables (2/2)

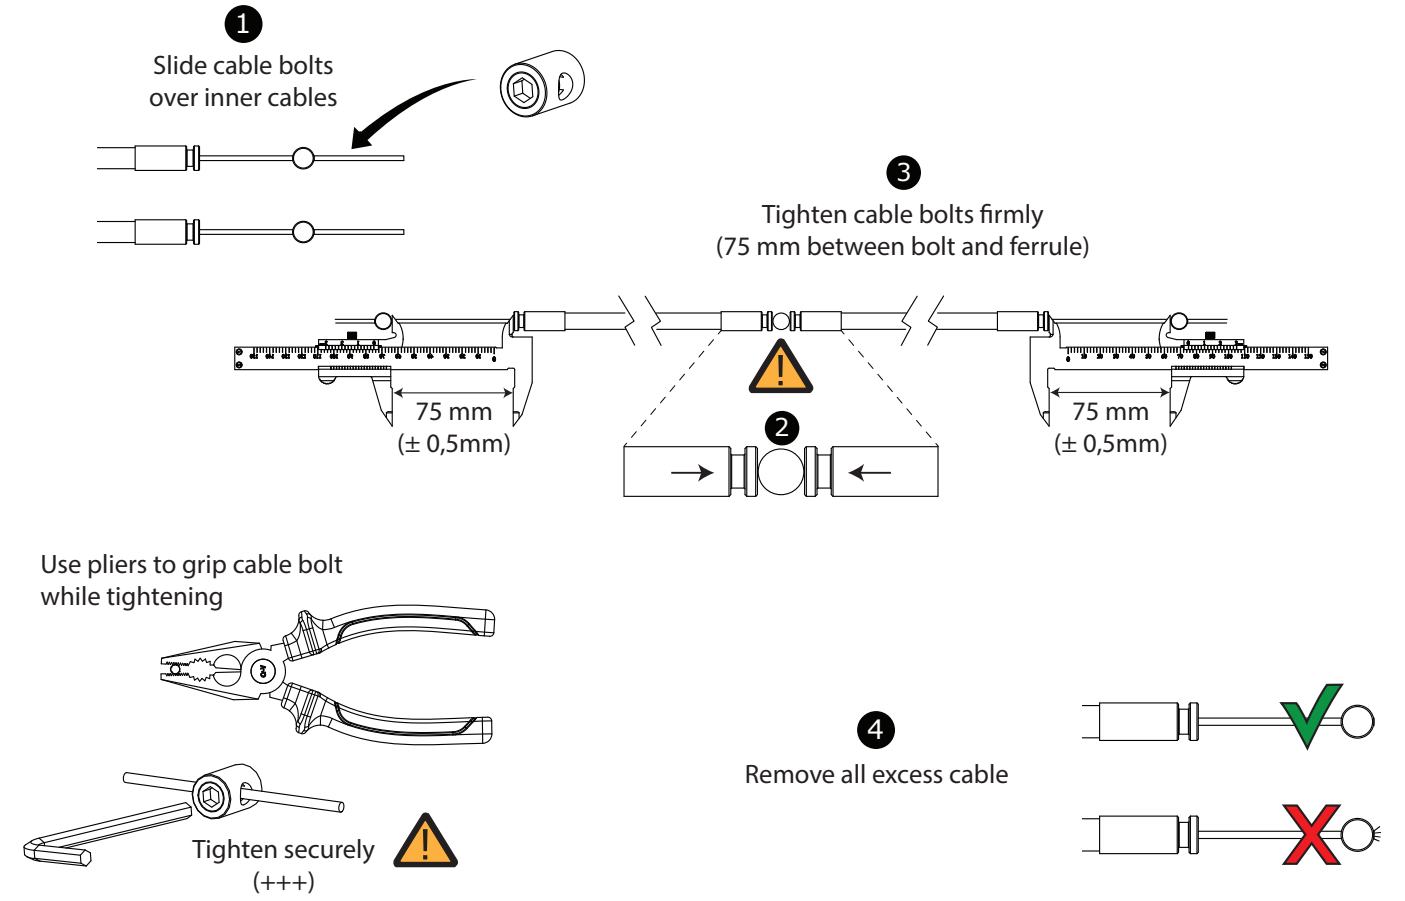

7 Mount new cables to exhaust

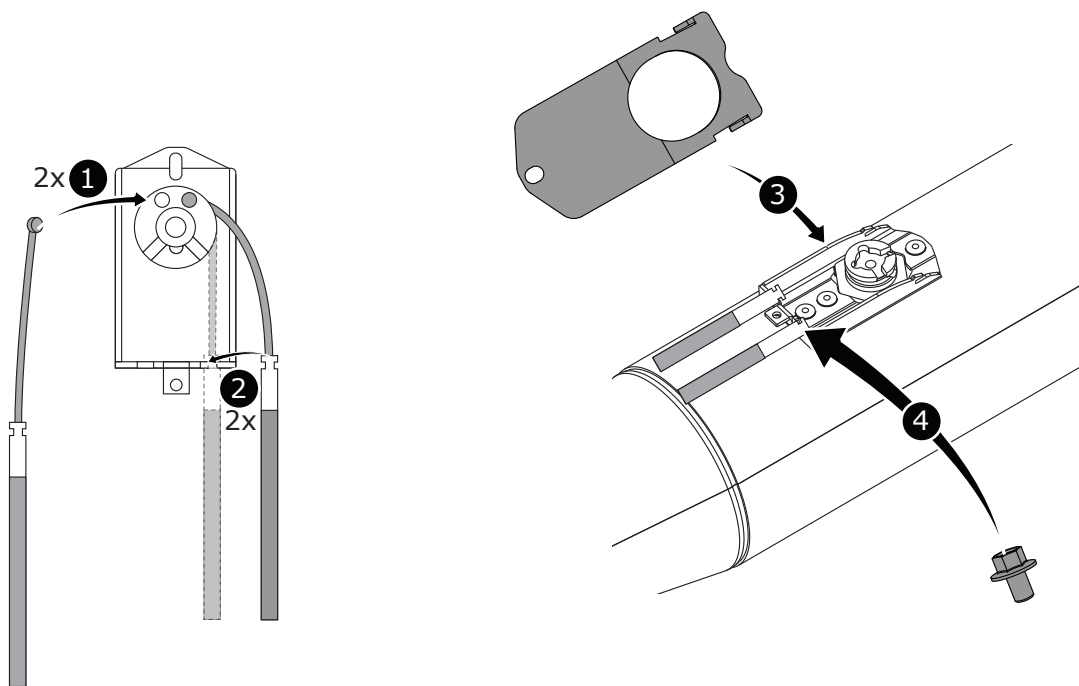

8 Mount new cables to servo's and adjust cable tension

