



SN.

Dr. Jekyll & Mr. Hyde®

THE EXHAUST



MANUAL : HARLEY-DAVIDSON® | EASYMOUNT | BLACKBOX





NRS, V-Rod 2012 ->, Streetrod

1



NRS, V-Rod 2012 up, Streetrod Easymount Blackbox




Mode Switch for Blackbox

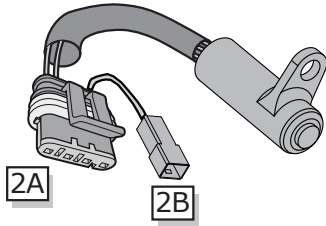


Blackbox

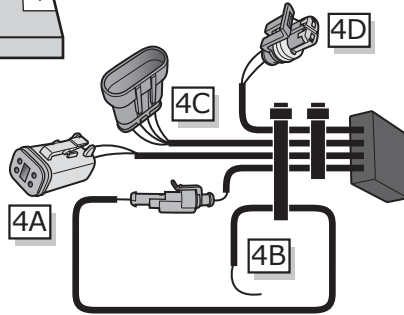


Y Cable

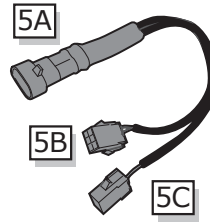

Exhaust/cable/servo system

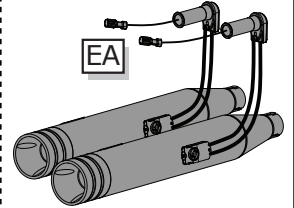




2




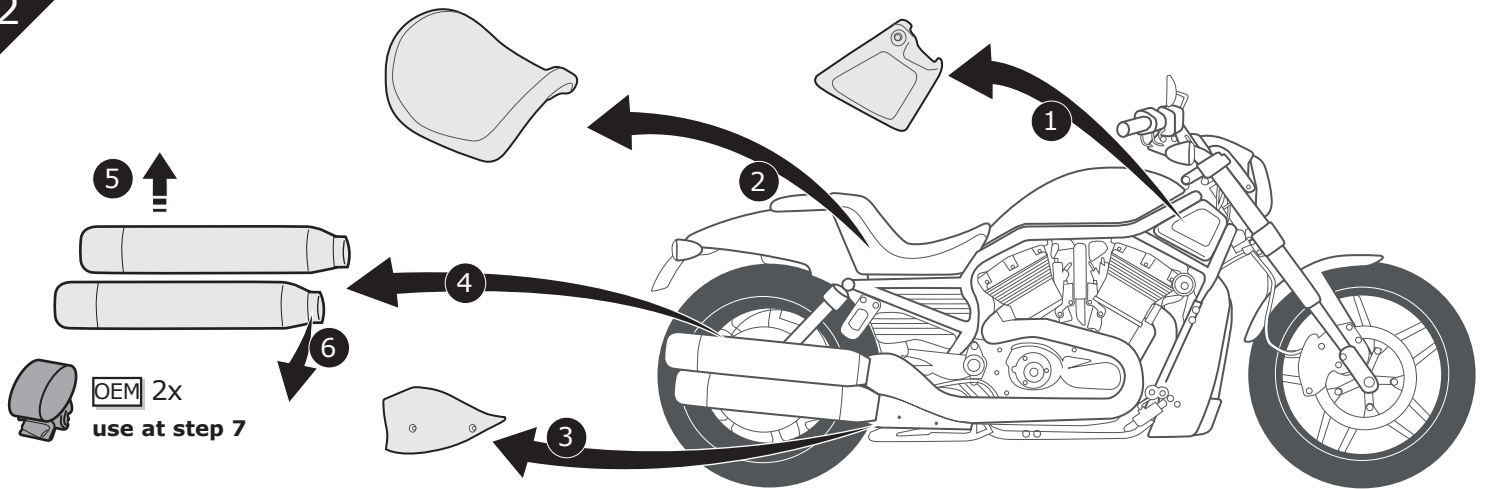


5 ↑

OEM 2x
use at step 7

3

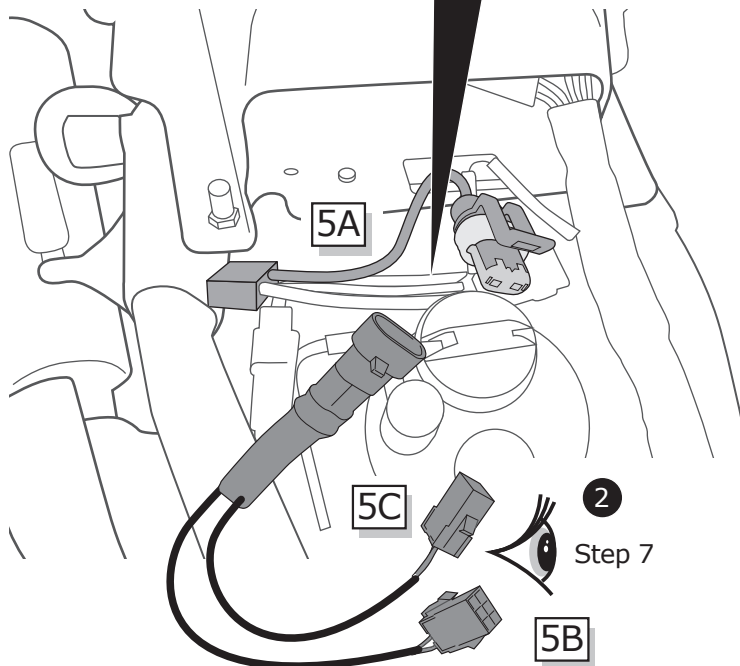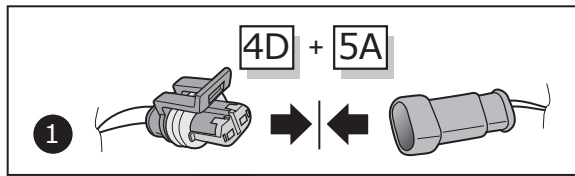

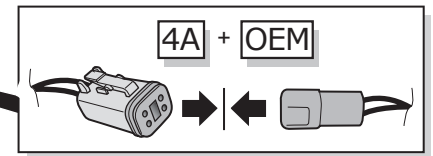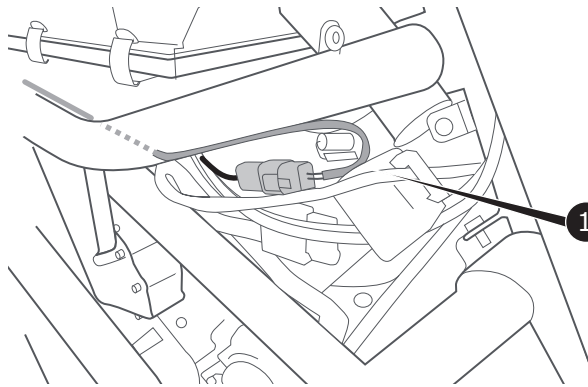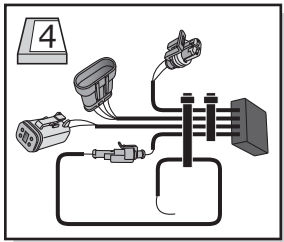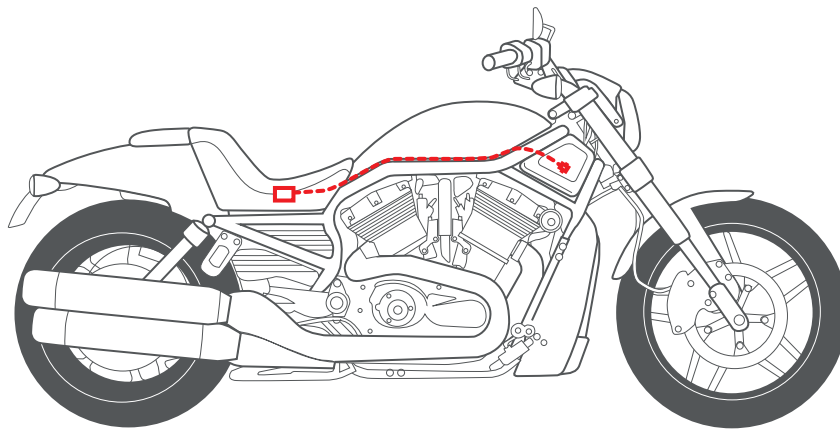



Speed signal

1
 (NL) Zwart-Blauw
 (DE) Schwarz-Blau
 (GB) Black-Blue







2
 (NL) Zwart-Blauw
 (DE) Schwarz-Blau
 (GB) Black-Blue

3
 (NL) Groen
 (DE) Grün
 (GB) Green

4B

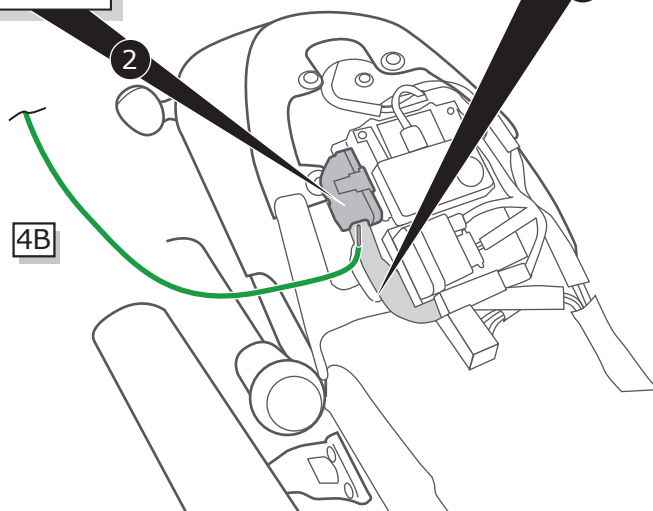


5

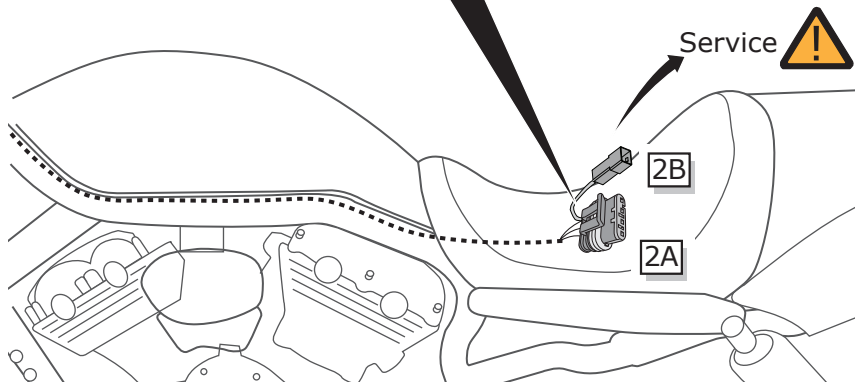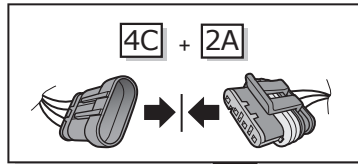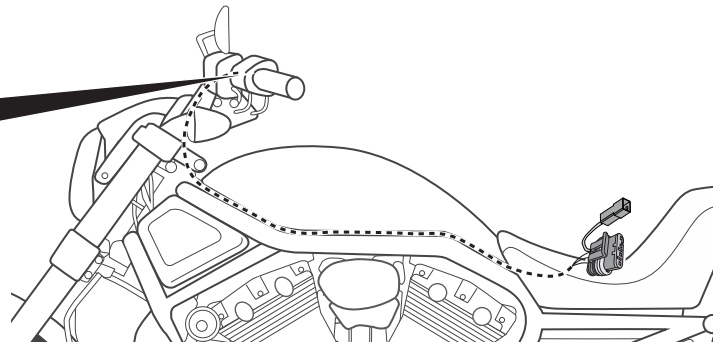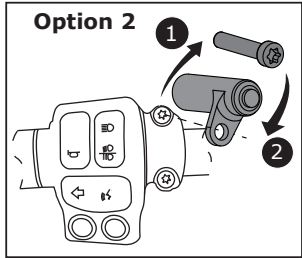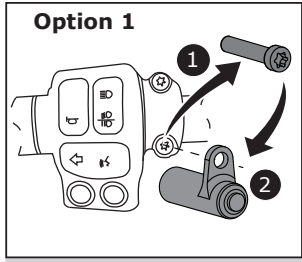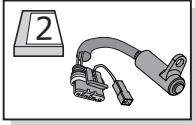


6

Items needed at step 7




Assembly Kit

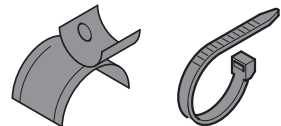

CA
2x


TW
16x

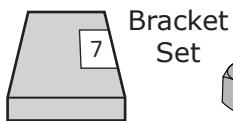


Bracket Set



N1
6x



B1
1x




N2
1x




W1
2x




Sw1
1x

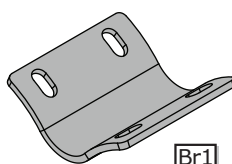

Br1
1x





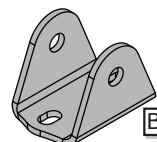


Br2
1x

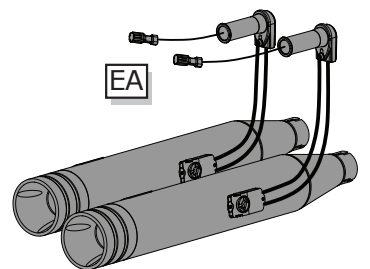


EA

7

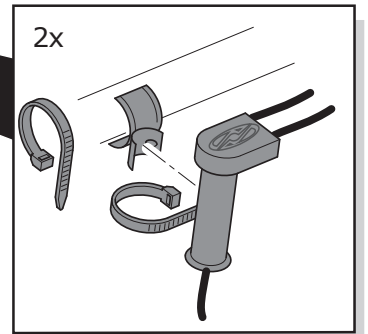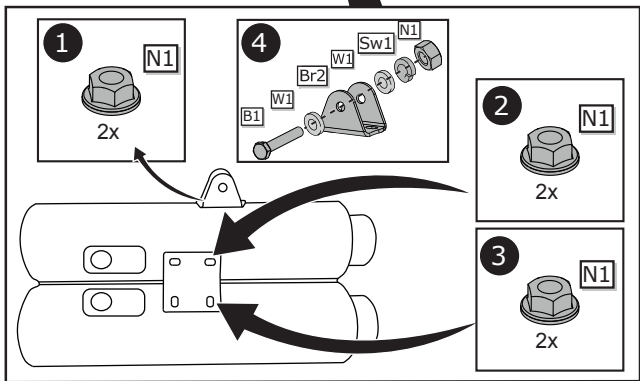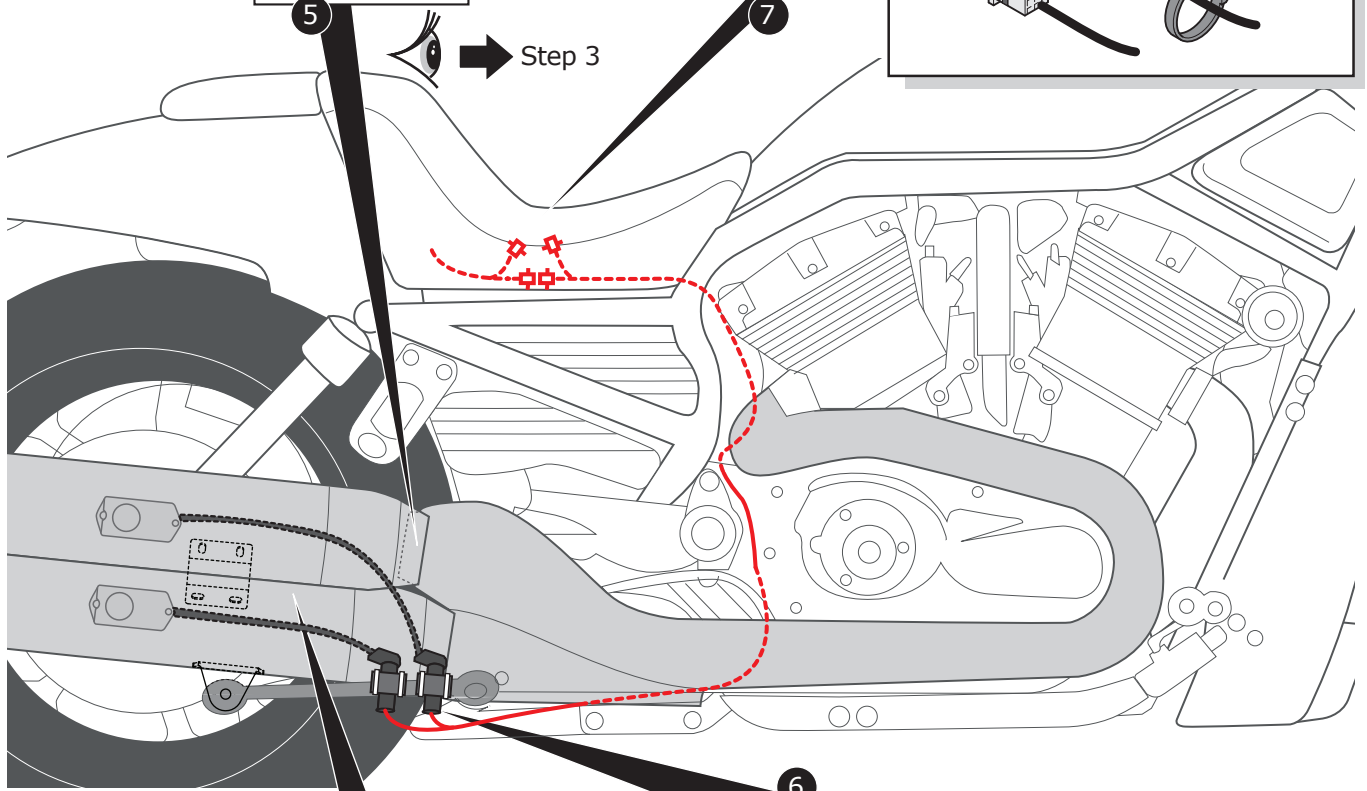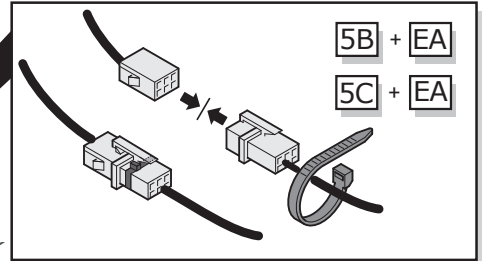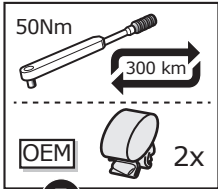

8



1
Complete System Check!

