



SN.

Dr. Jekyll & Mr. Hyde[®]

THE EXHAUST

MANUAL : **BMW[®]** | **EASYMOUNT** | **SMARTBOX 2**

NEW IN THIS MANUAL:
- SMARTBOX 2





R 1200 GS-AC Adventure

2010 - 2012



1

R 1200 GS-AC Adventure 2010-2012



Easymount Smartbox 2

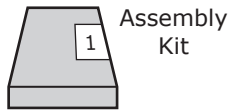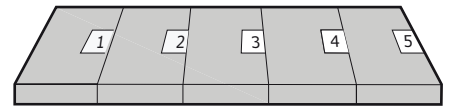



Assembly Kit

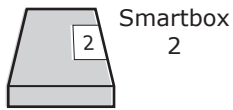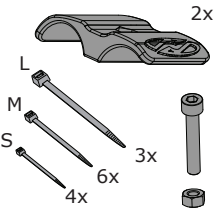



Smartbox 2

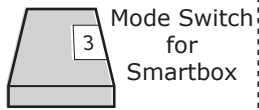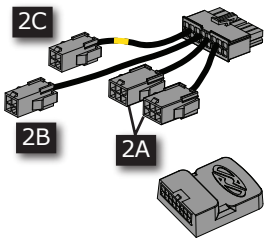


Mode Switch for Smartbox

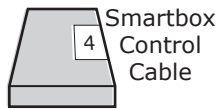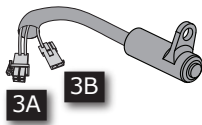


Smartbox Control Cable

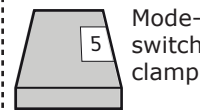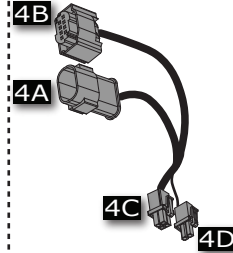



Mode-switch clamp

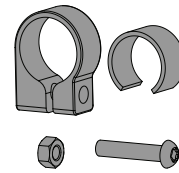


Exhaust/Cable /Servo System

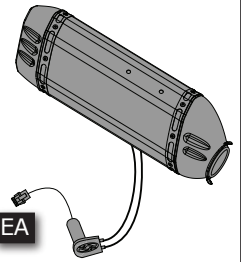

2

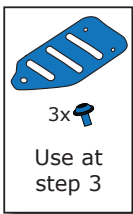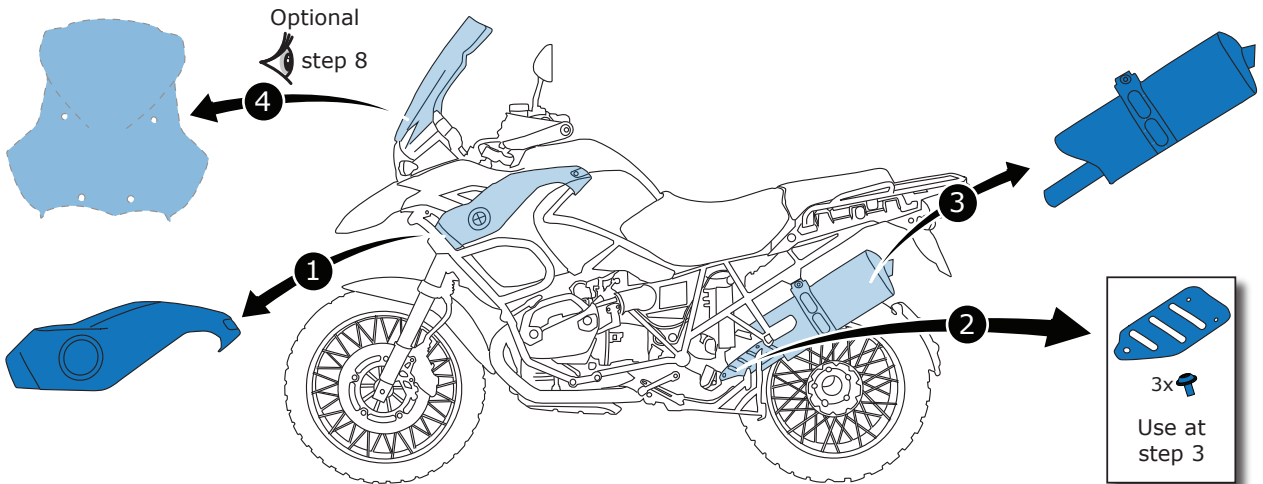




3

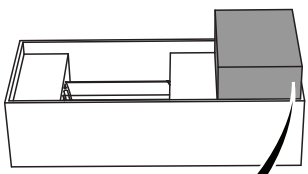





Items required





To mount the exhaust use the mountingset + manual

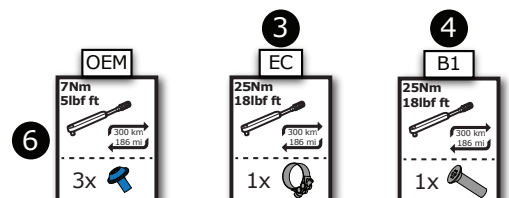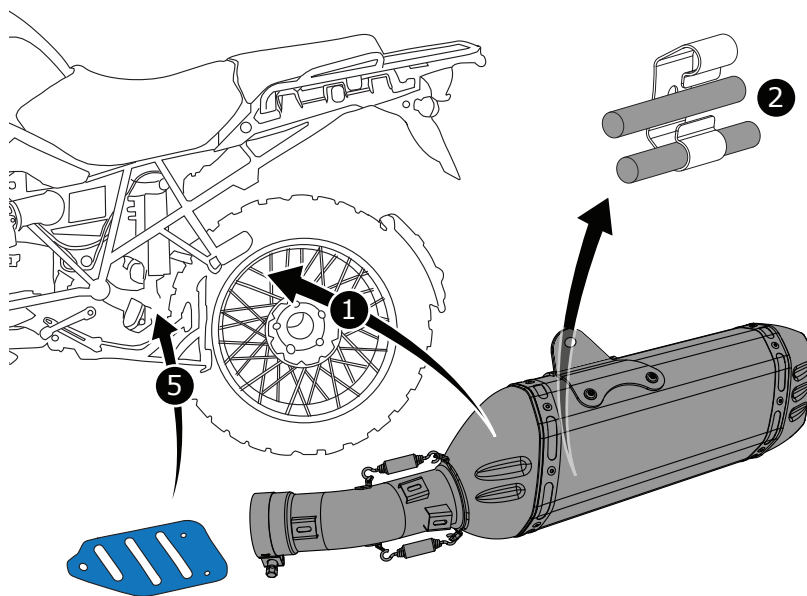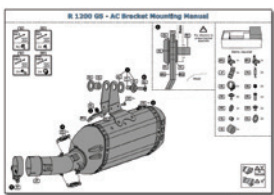



4

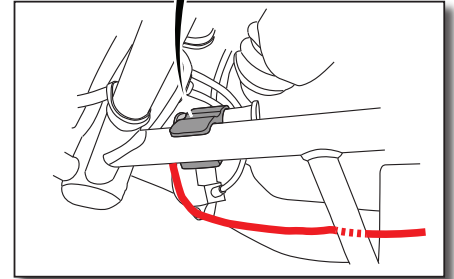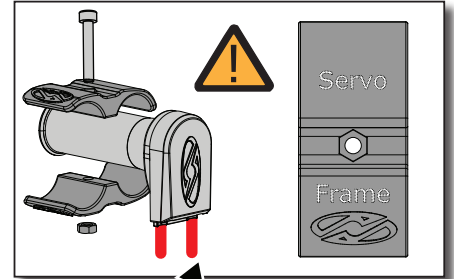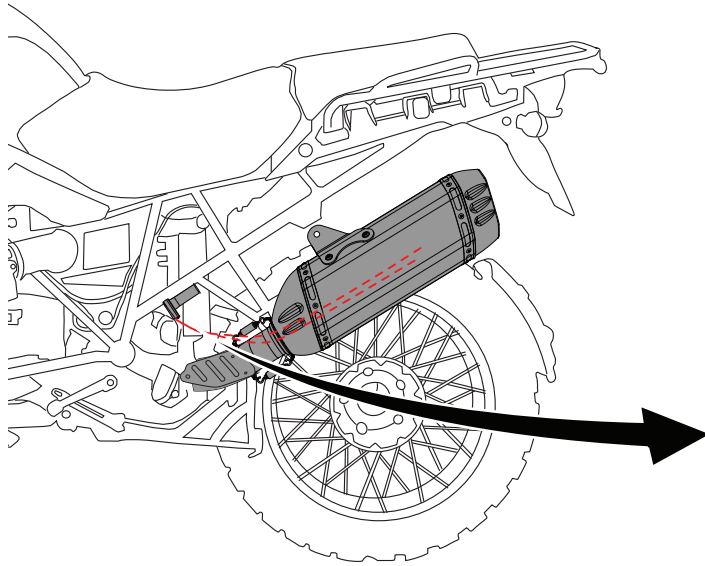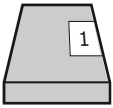

5

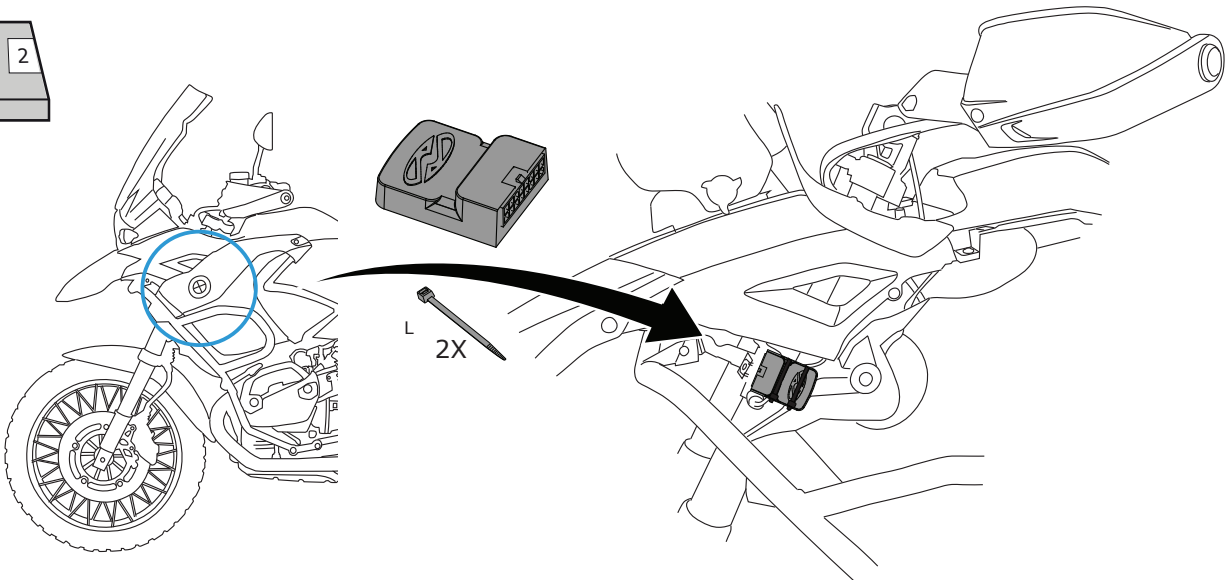
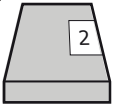


6

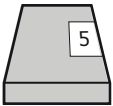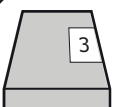


Ty-wrap cable to brake line

4

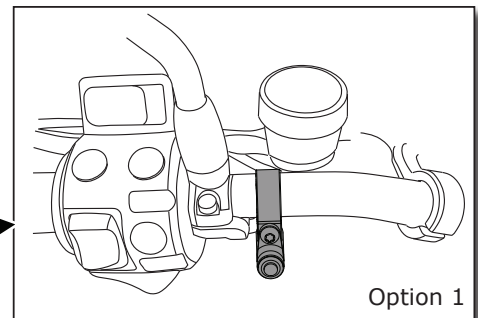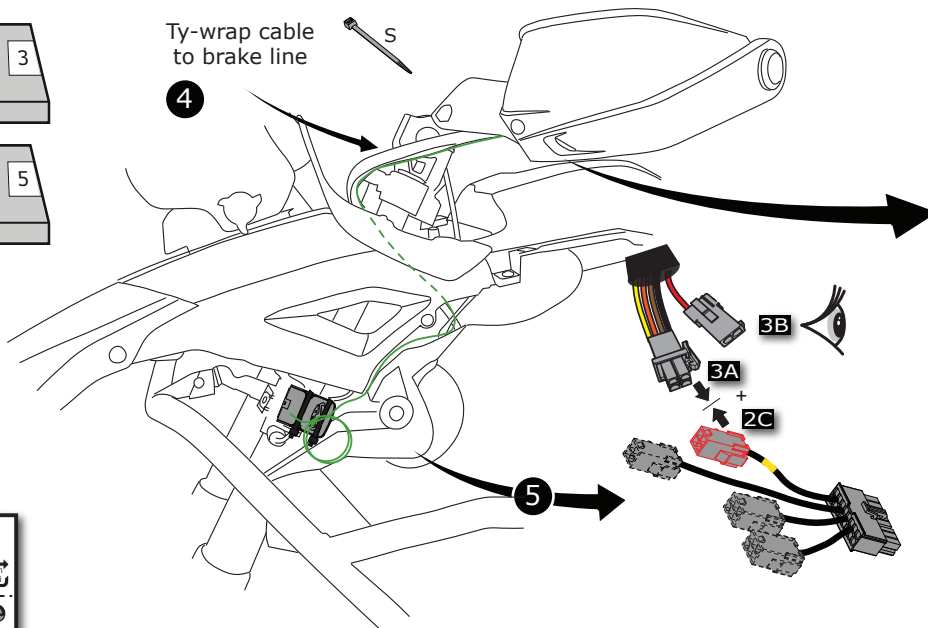

Option 1

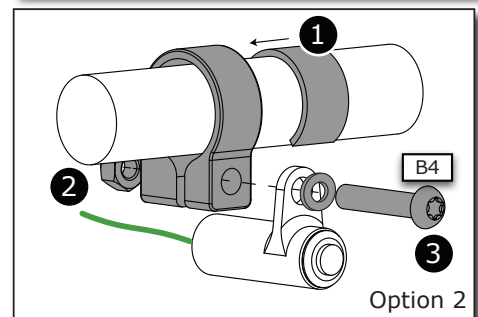

Option 2




B4

2 Nm
1,5 lbf ft



1x





7

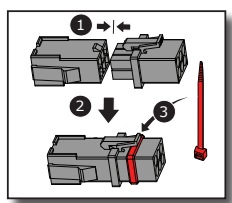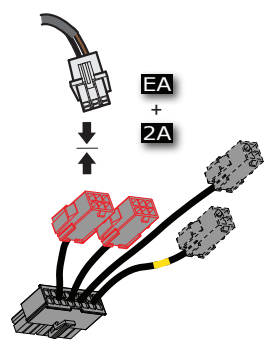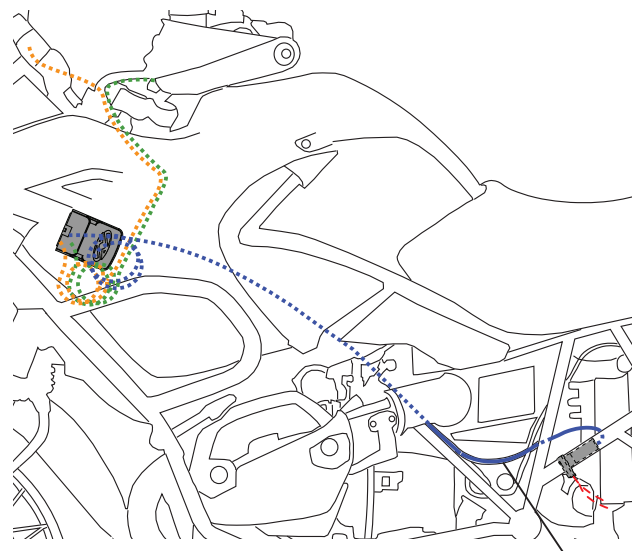

In reality all cables are black


Follow brake line

8

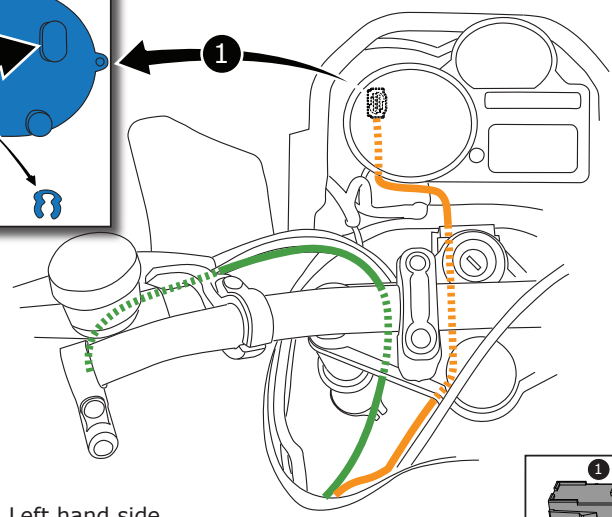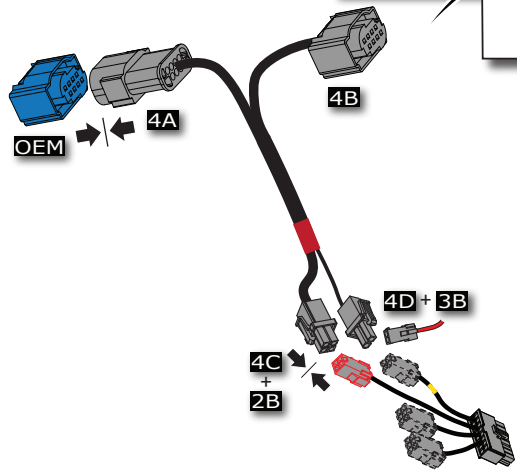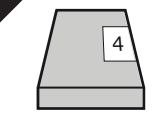
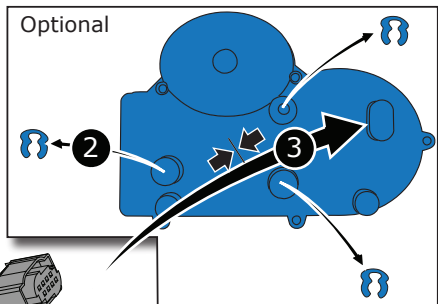


Left hand side cable routing:

step 7

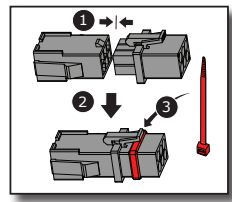

9

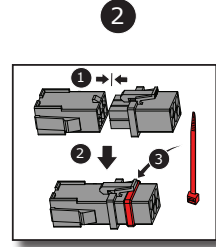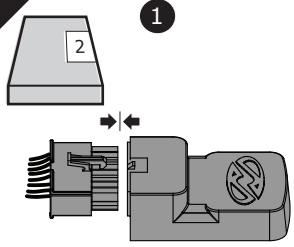

Complete System Check!

