



SN. . . . .

# Dr. Jekyll & Mr. Hyde®

## THE EXHAUST

MANUAL : HARLEY-DAVIDSON® | SMARTBOX 2

### NEW IN THIS MANUAL:


- 2021 MODEL
- PLUG & PLAY POWER CABLE




Fat Bob  
2021->

1


# Fat Bob 2021-> Smartbox 2

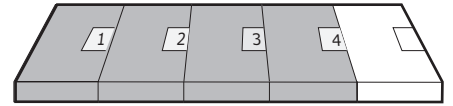


**1 Assembly Kit**

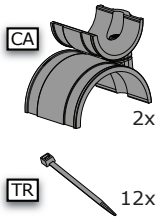


**2 Smartbox 2**

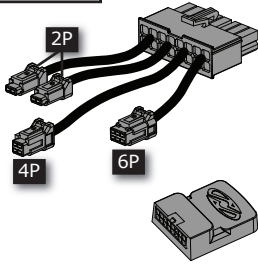


**3 Mode Switch for Smartbox**

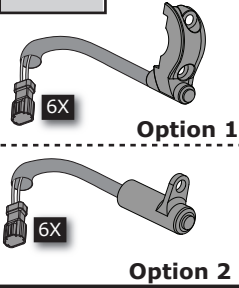

**4 Smartbox Power Cable**

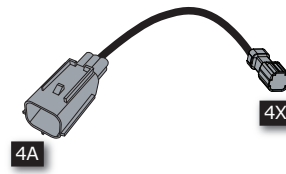


Exhaust/Cable/Servo System

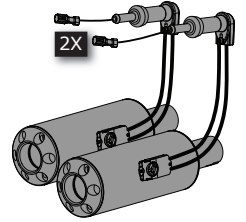

2

Re-use at step 3 & 4

4x 2x 2x

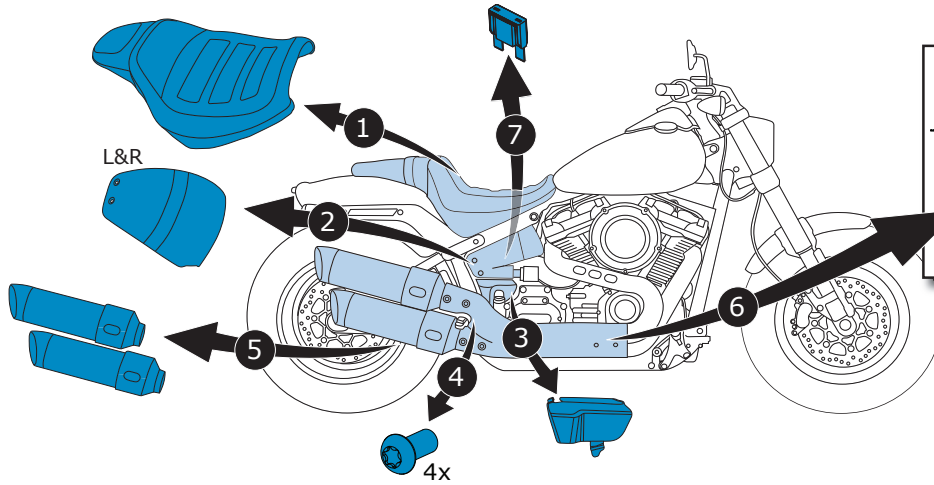




(optional)  
Reuse at step 4

2x

3


## Upper exhaust

Items required

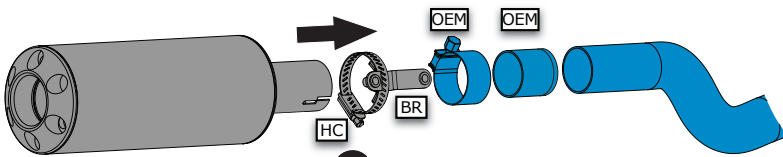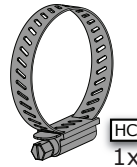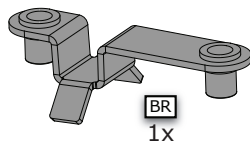

**1**  
Slide exhaust on OEM header


**2**  
Attach exhaust to OEM bracket

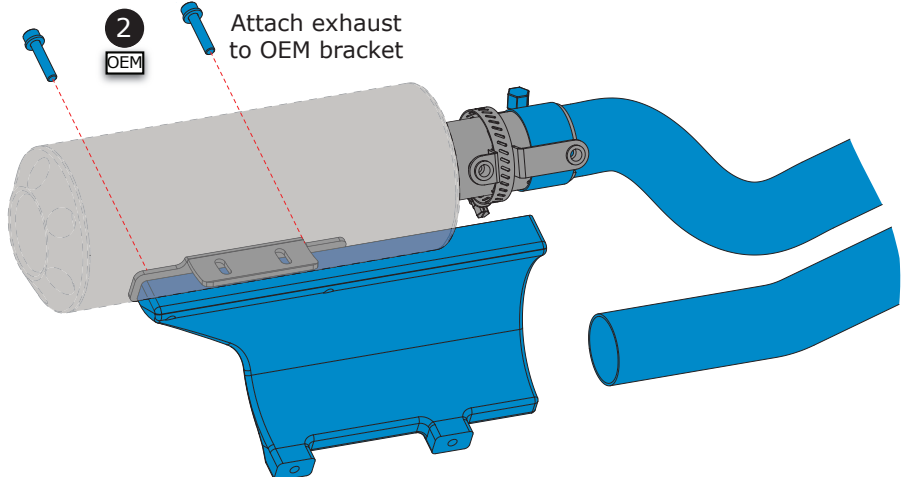


OEM	OEM
30Nm 22lbf ft	10Nm 7lbf ft
1x	2x

4

### Lower exhaust

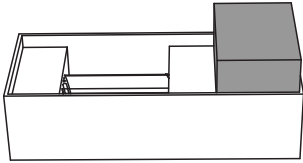


Items required

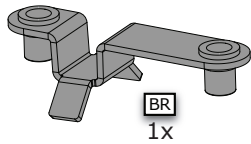

BR  
1x




HC  
1x

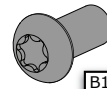



B1  
4x



N1  
4x


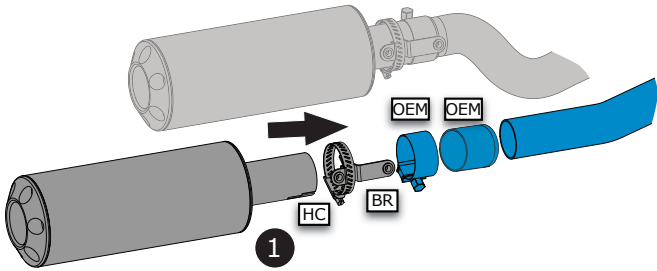


1  
Slide exhaust on  
OEM header

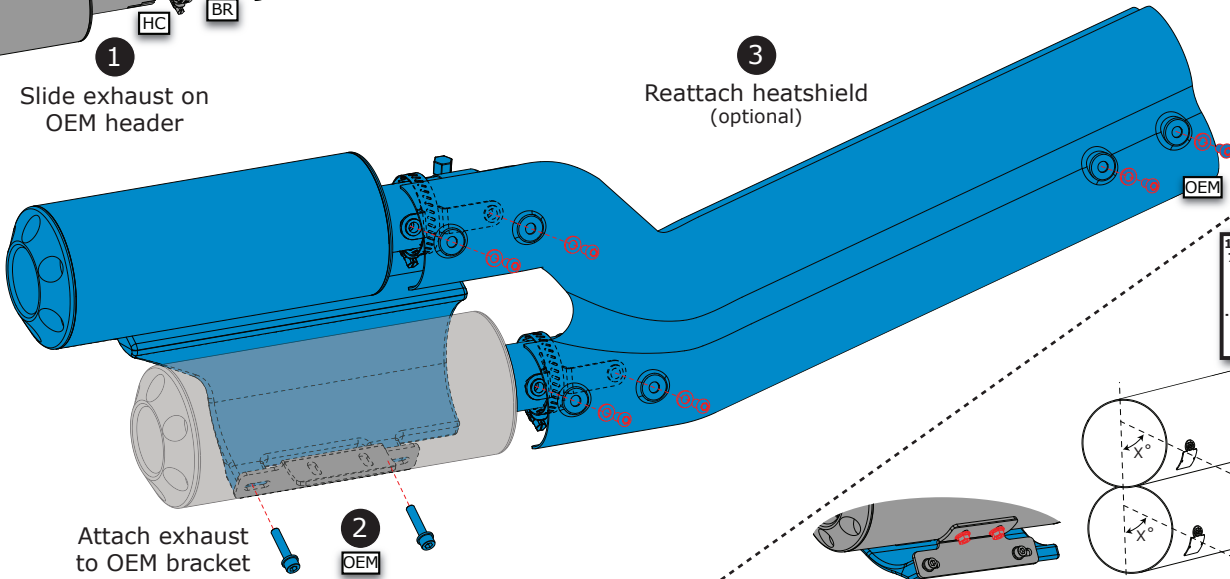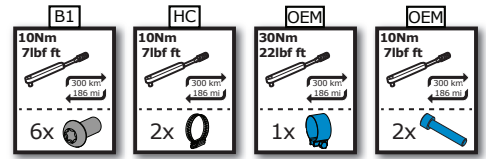



2  
Attach exhaust to  
OEM bracket

3  
Reattach heatshield  
(optional)

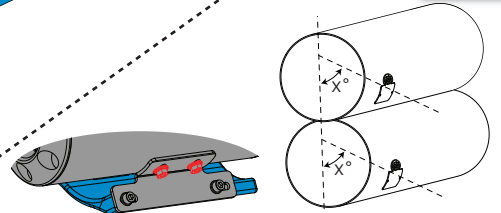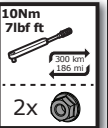


If necessary: Loosen lower exhaust and align exhausts


5

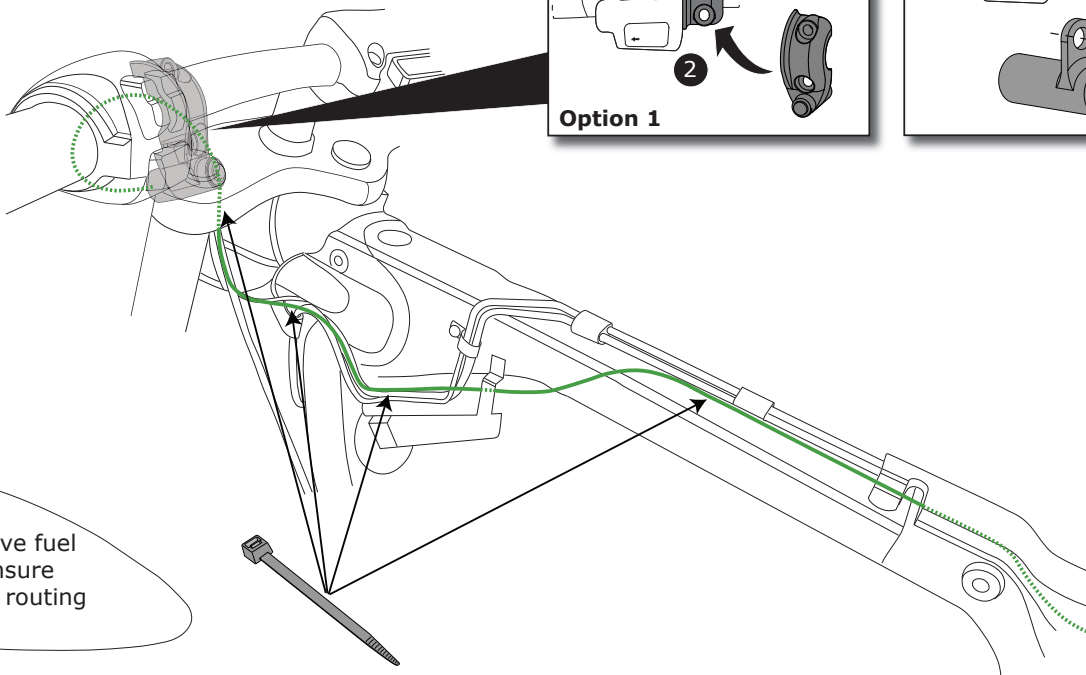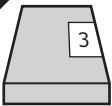

Lift or remove fuel tank to ensure proper cable routing







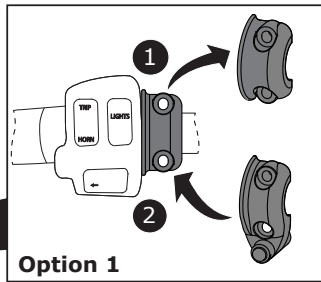


Option 1




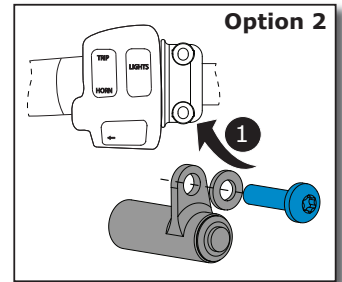


6





Left hand side

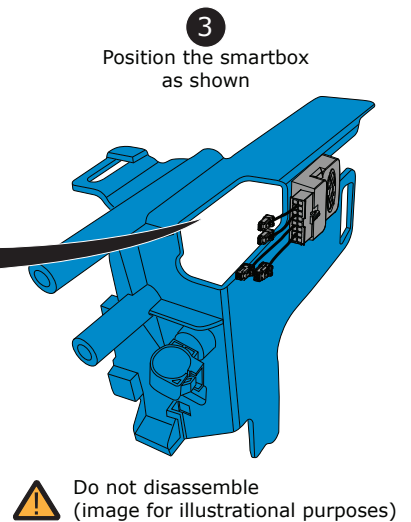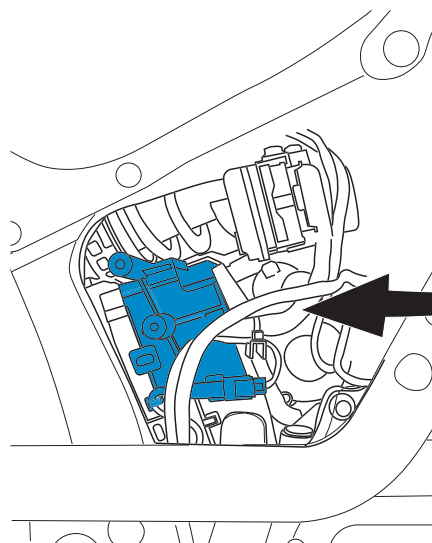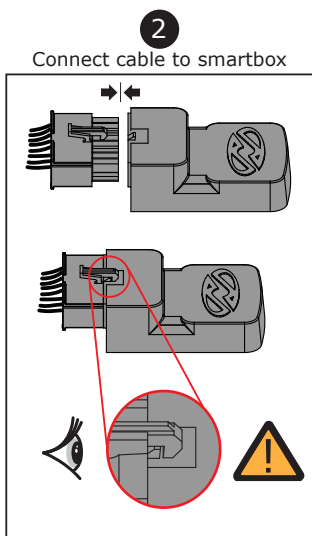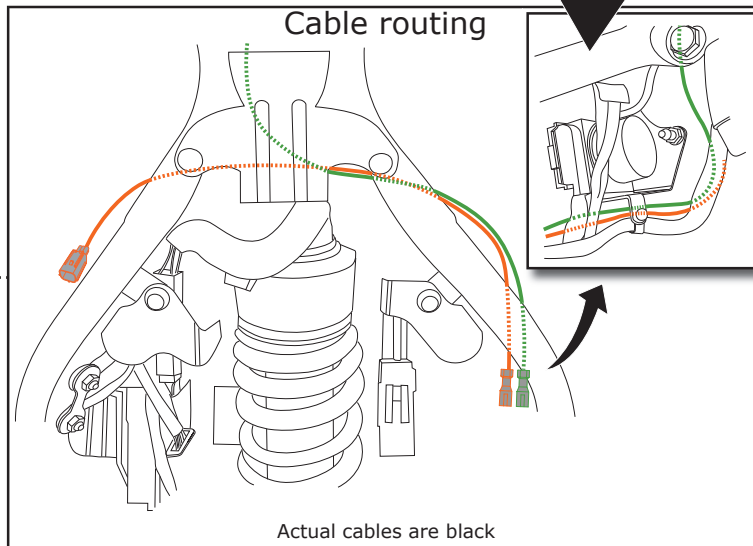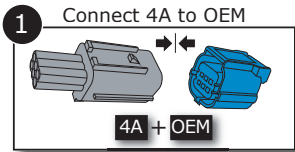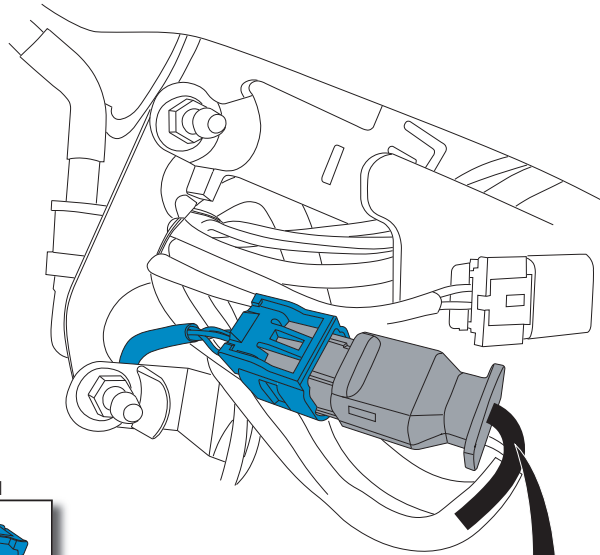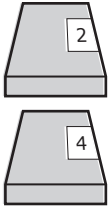

7

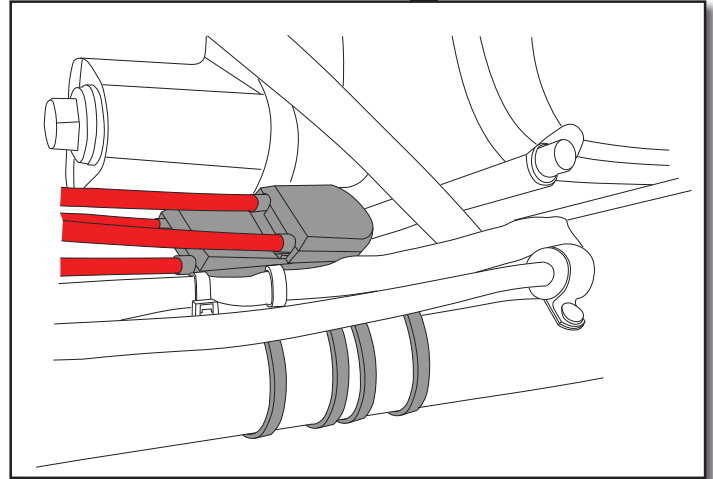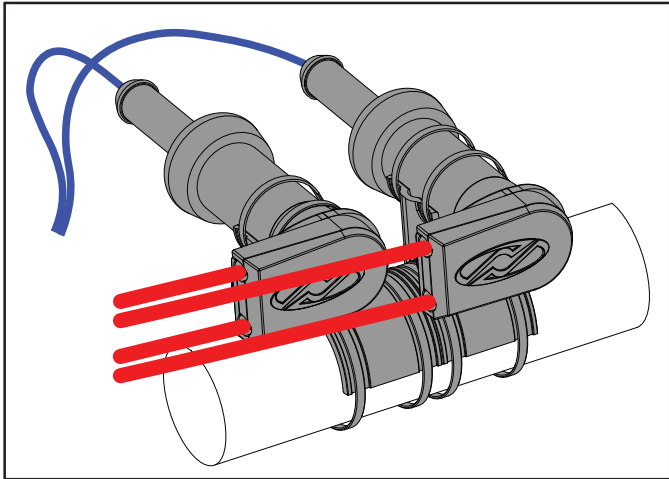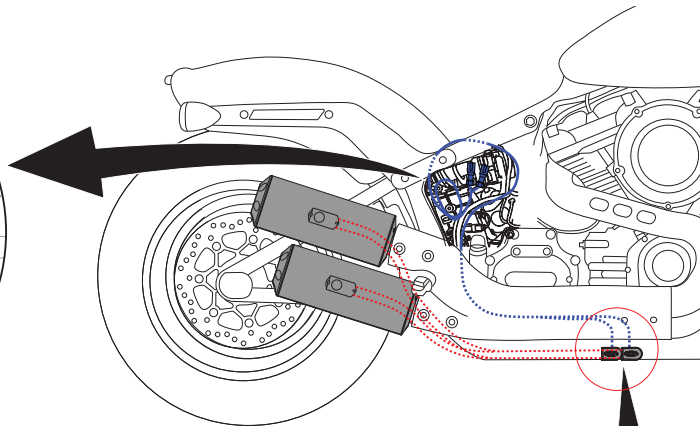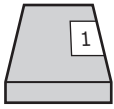

8

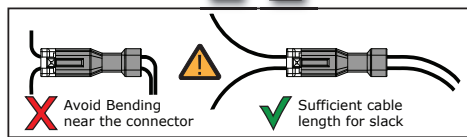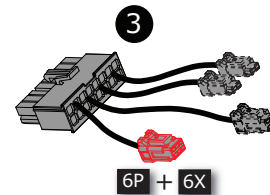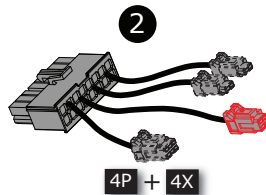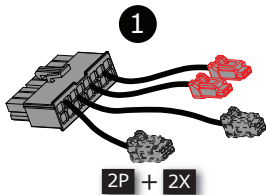

9



Reinstall fuse and perform a

**Complete System Check!**

