


Softail (2018-2020) V-strike Mounting Manual


1

Items required

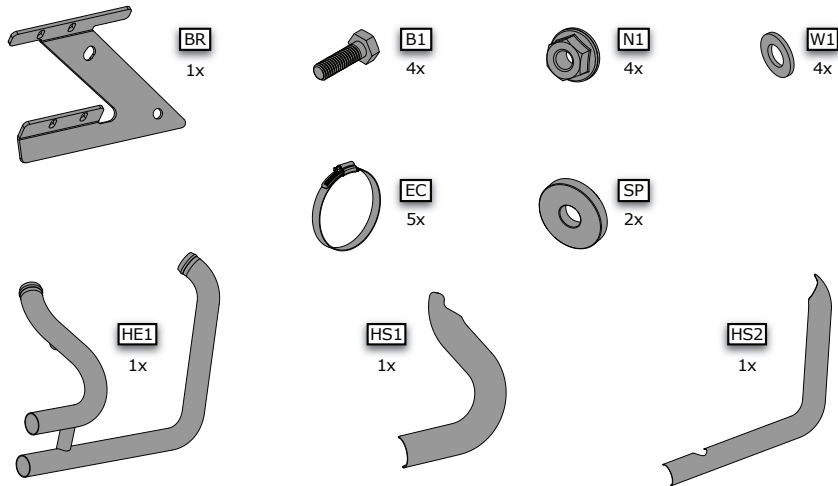


2

Install OEM flanges & oxygen sensors

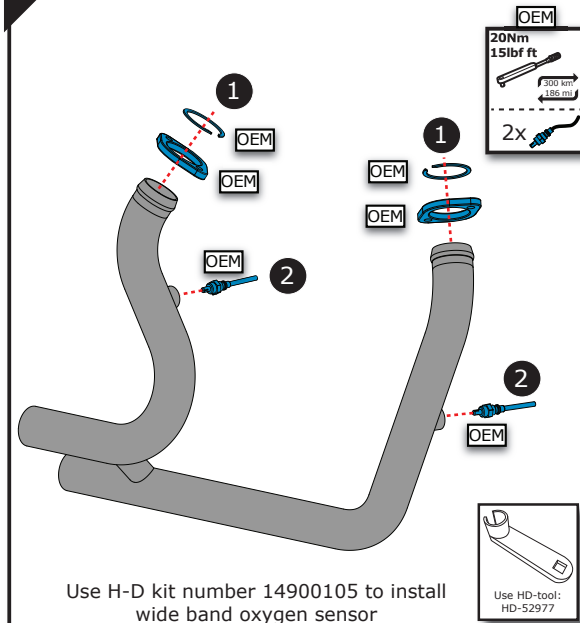


If installed:
Remove floorboard or mid control
(These will be remounted later)

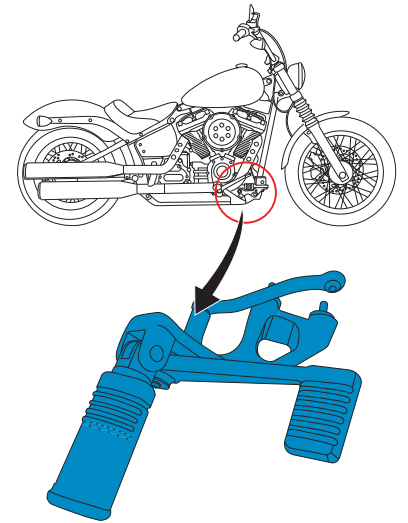


3

Install Headers on motorcycle
Tighten bolts later, in step 7!

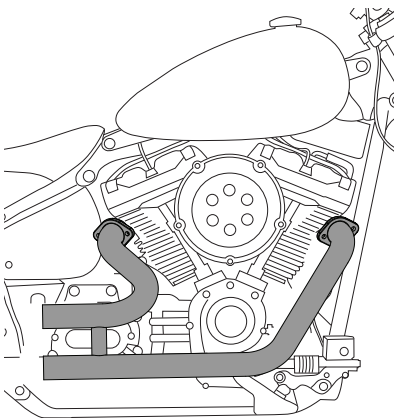


Mount heat shields to headers
Tighten clamps later, in step 7!

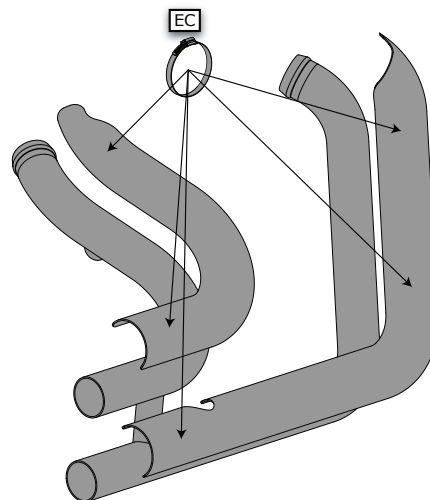

4


Install bracket on motorcycle
Use OEM bolts
Tighten bolts in step 5

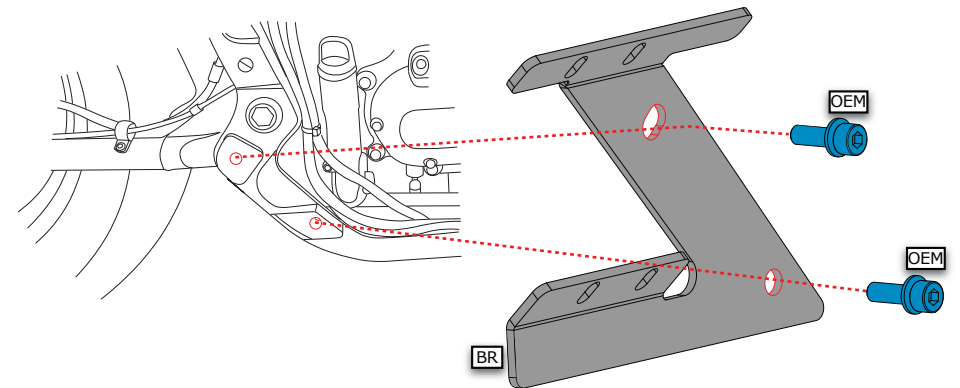

Softail (2018-2020) V-strike Mounting Manual


5

Install upper exhaust

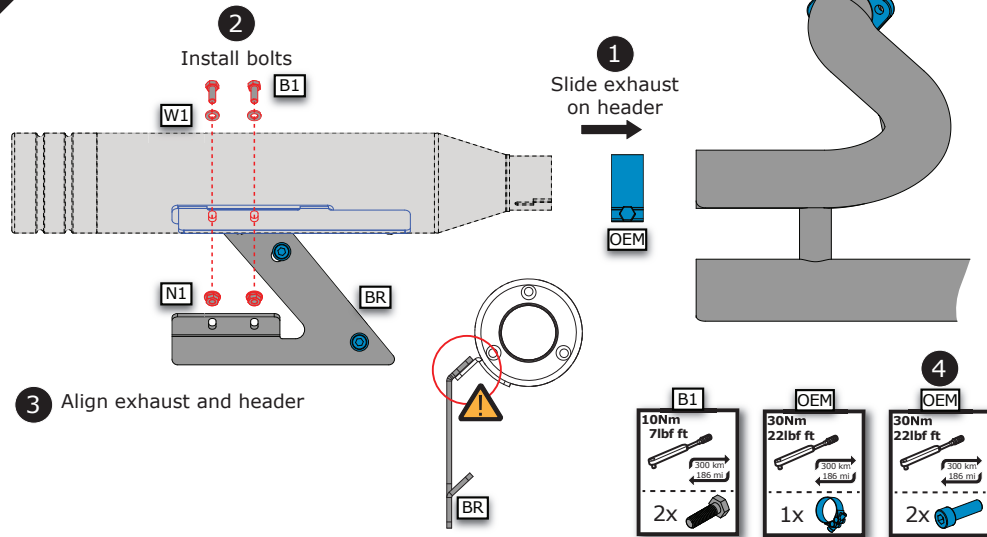





6

Install lower exhaust

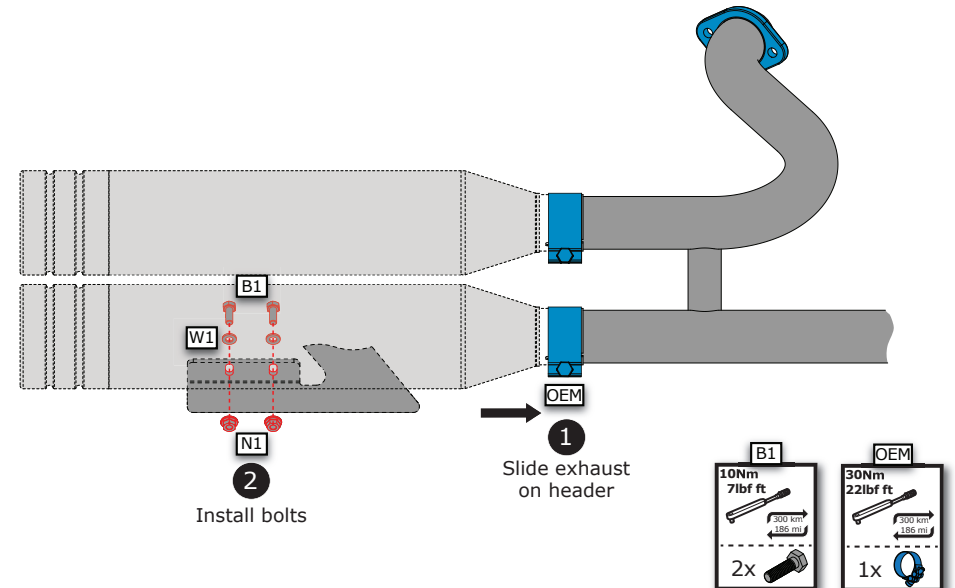



7

Tighten headers & heat shields

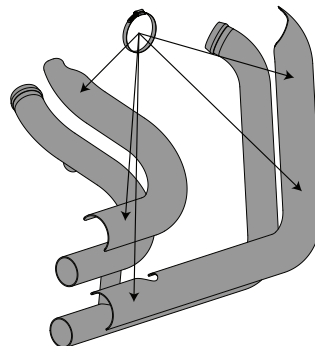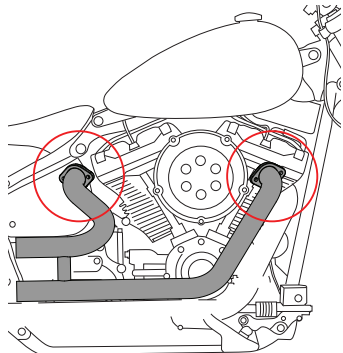

8


Use spacers on floorboard or mid control before re-installing them

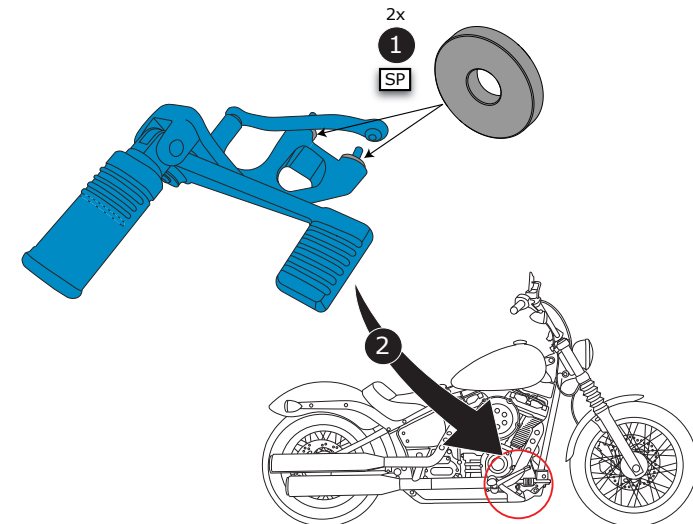

Softail (2021->) V-strike Mounting Manual


1

Items required

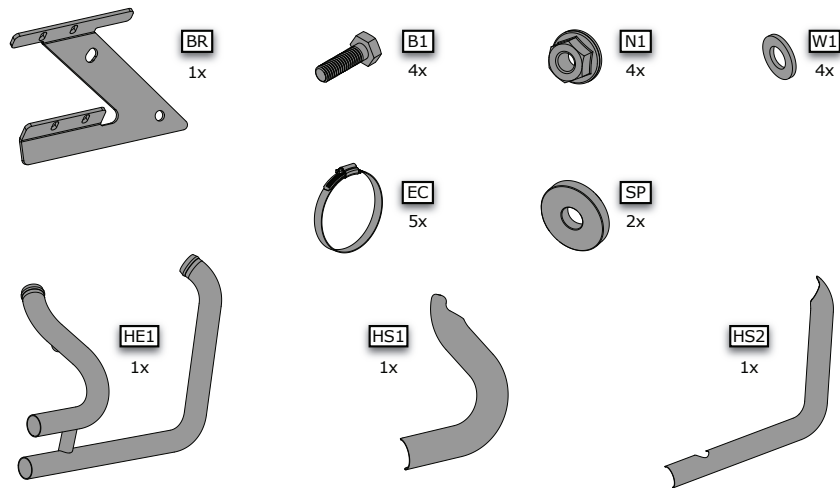

2

Install OEM flanges & oxygen sensors

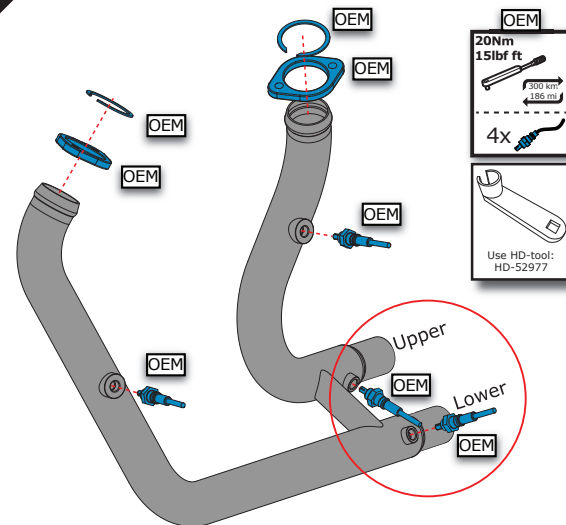


Upper exhaust oxygen sensor = gray
Lower exhaust oxygen sensor = black




If installed:

Remove floorboard or mid control
(These will be remounted later)

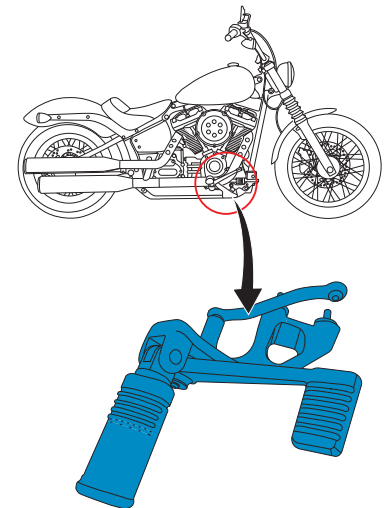


3

Install Headers on motorcycle
Tighten bolts later, in step 7!

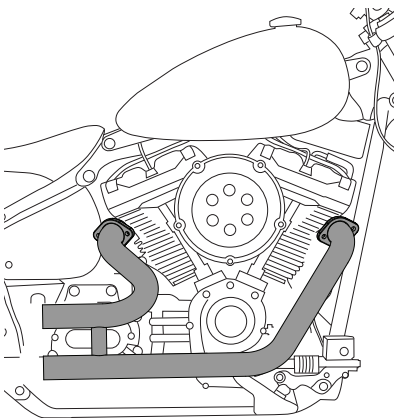


Mount heat shields to headers
Tighten clamps later, in step 7!

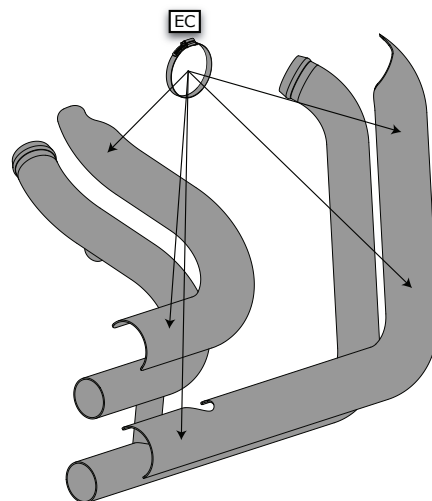

4


Install bracket on motorcycle
Use OEM bolts
Tighten bolts in step 5

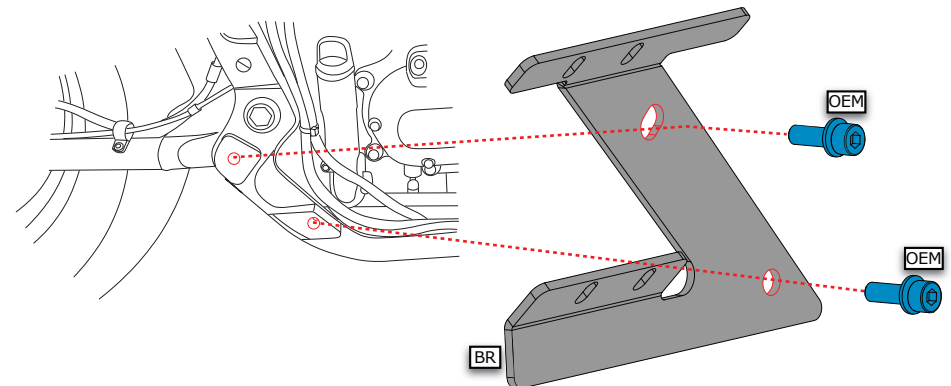

Softail (2021->) V-strike Mounting Manual


5

Install upper exhaust

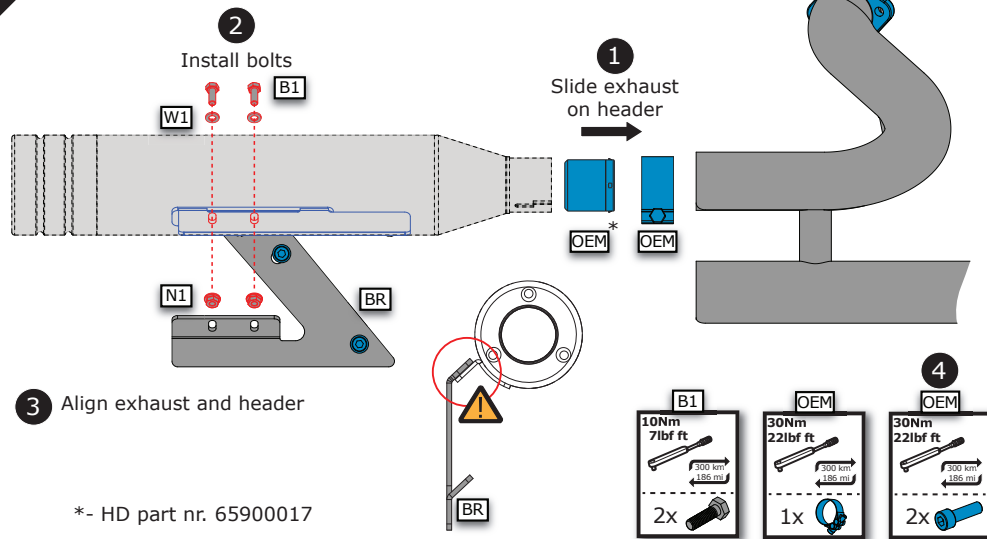





6

Install lower exhaust

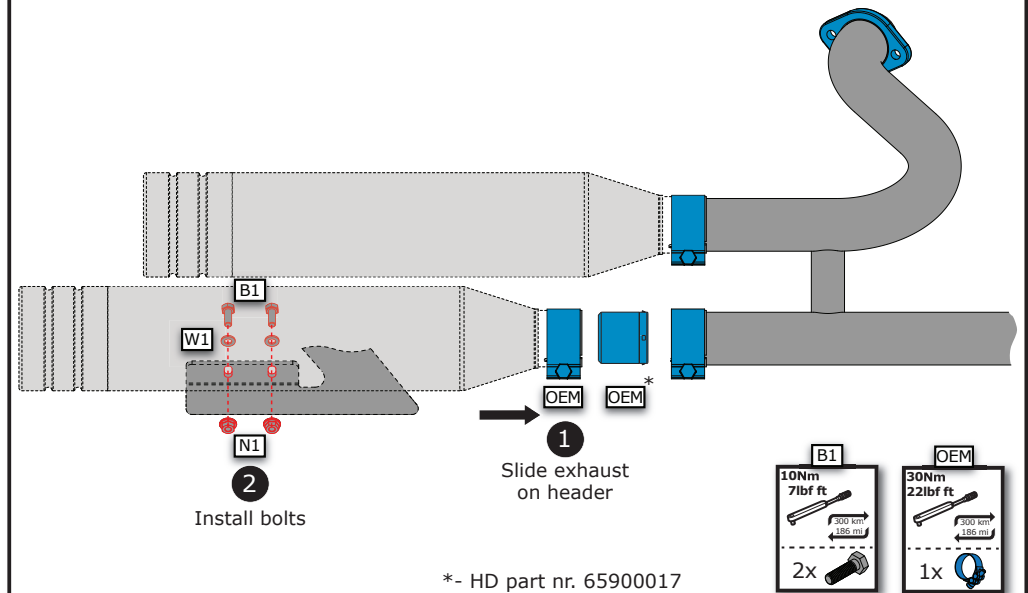

7

Tighten headers & heat shields

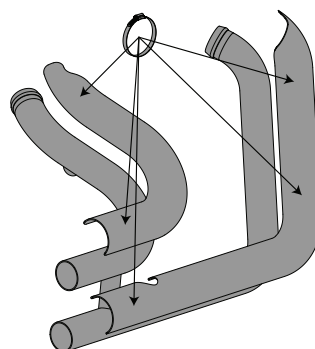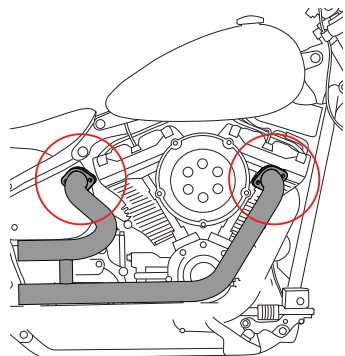

8

Use spacers on floorboard or mid control before re-installing them

