



Softail (2018->) V-Strike Footrest Mounting Manual (Wide Frame)

1

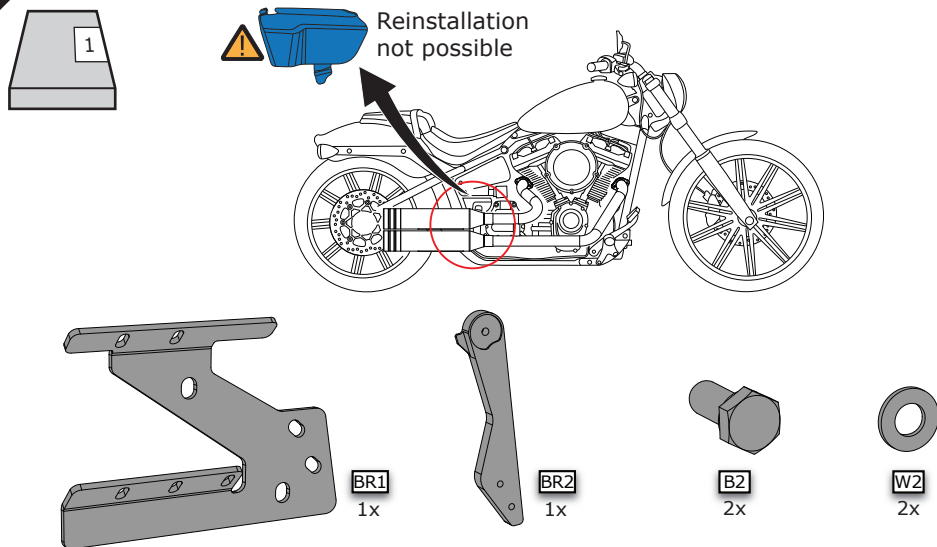


2

Remove lower exhaust

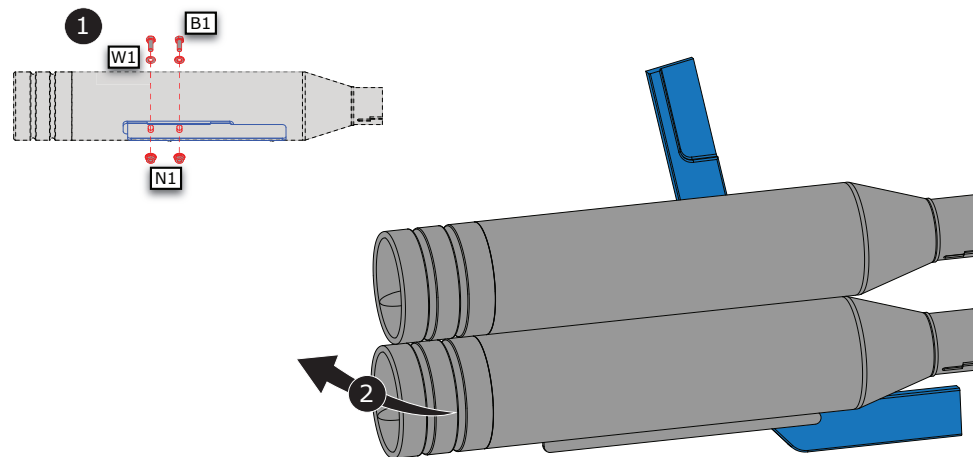


3

Remove "old" bracket

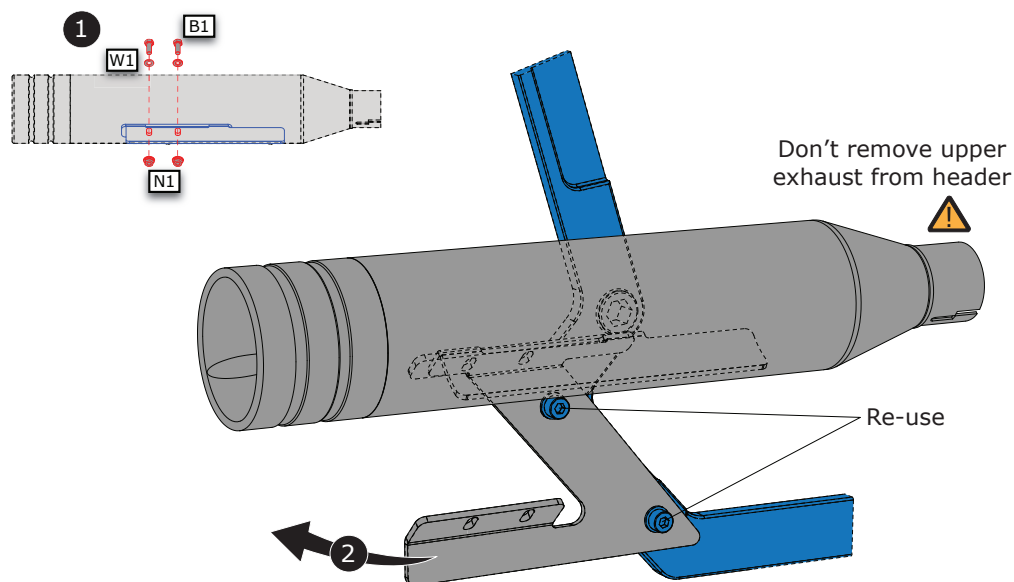


4

Install bracket on motorcycle
Use OEM bolts
Tighten bolts in step 7

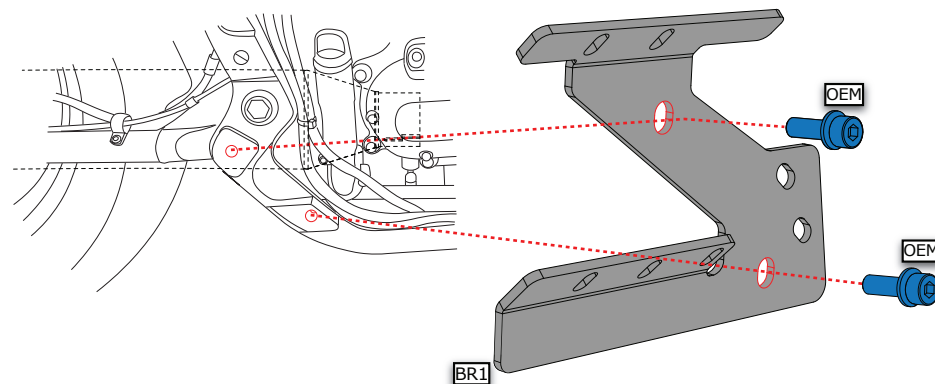


Softail (2018->) V-Strike Footrest Mounting Manual (Wide Frame)


5

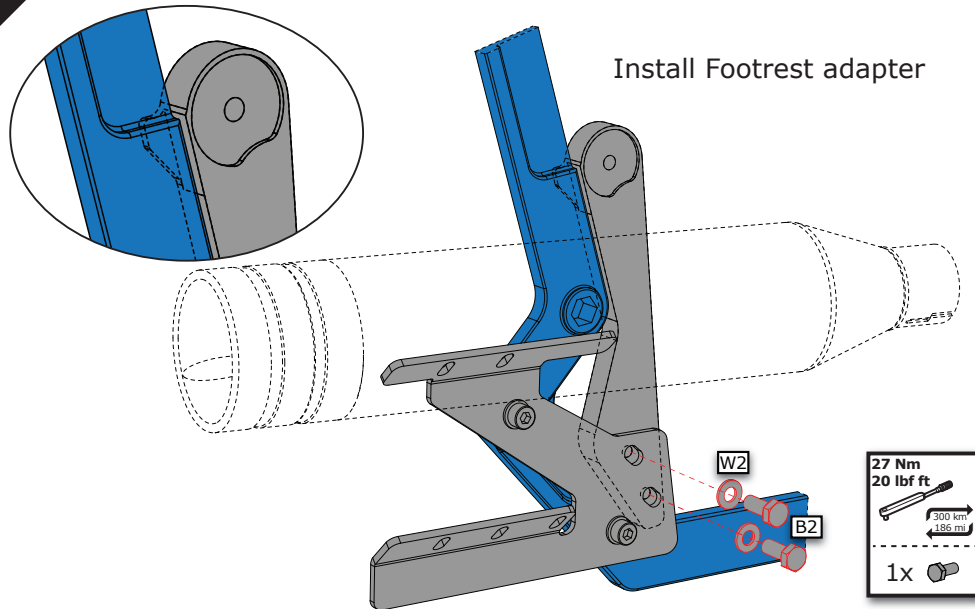

6

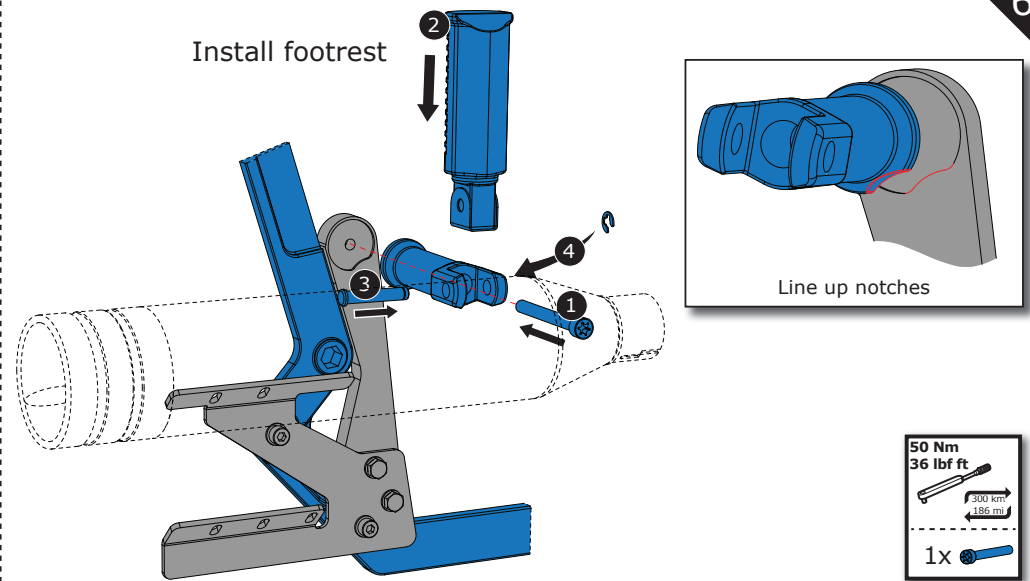

7

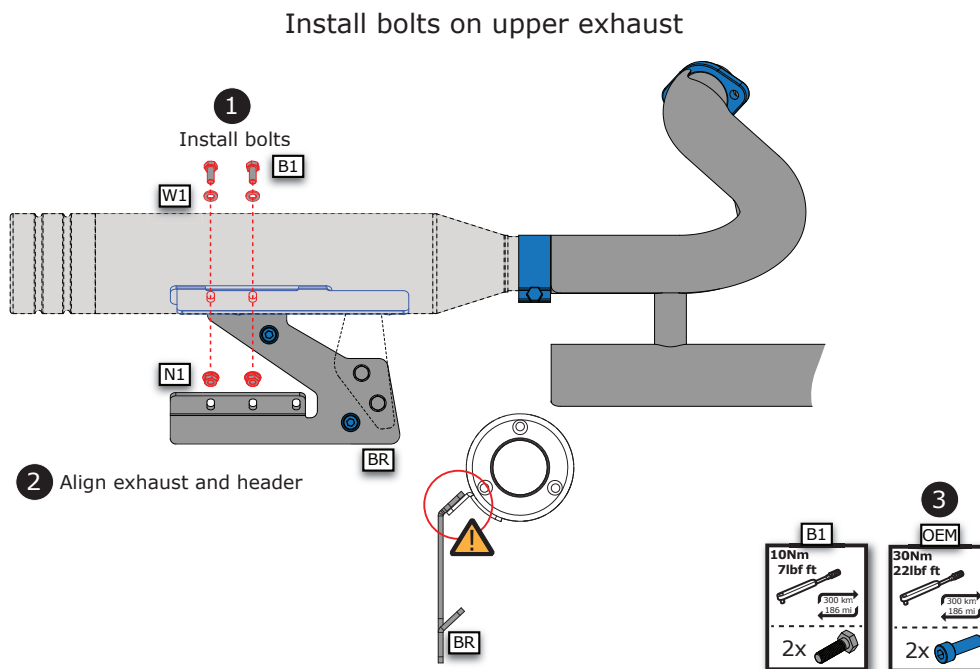

8

