


Softail (2018->) Twenty-One Mounting Manual


1

Items required

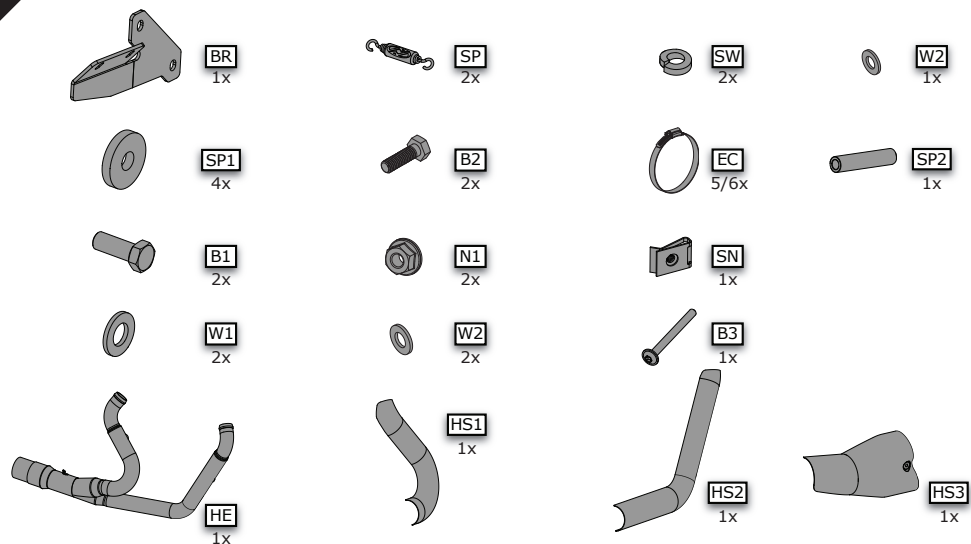


2

Install OEM flanges & oxygen sensors

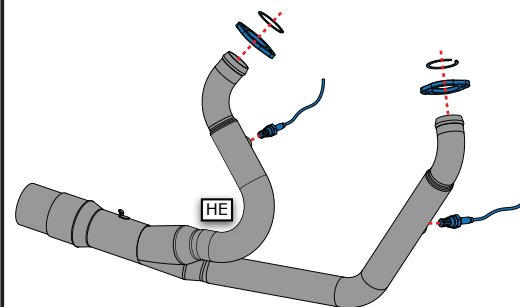

Use H-D kit number 14900105 to install wide band oxygen sensor

If installed:
Remove floorboard or mid control
(These will be remounted later)

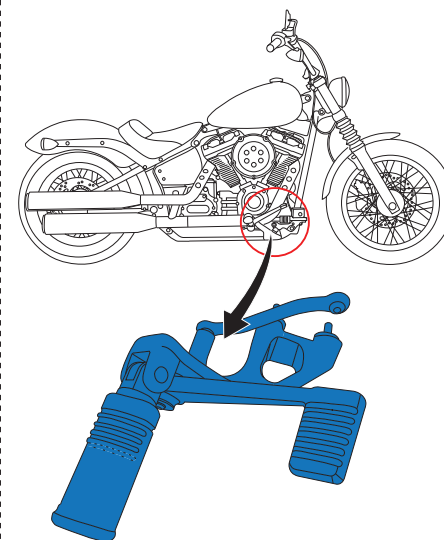


3

Install Headers on motorcycle Tighten nuts later, in step 6!


HE
Narrow models
header J&H nr.
1037

HE
Wide models
header J&H nr.
1038

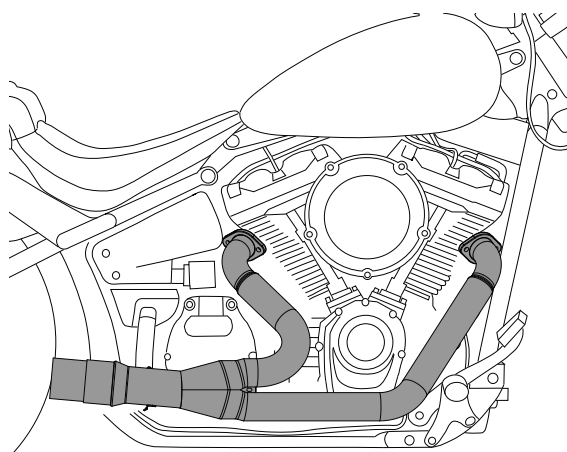


4

Install bracket on motorcycle Tighten bolts in step 6

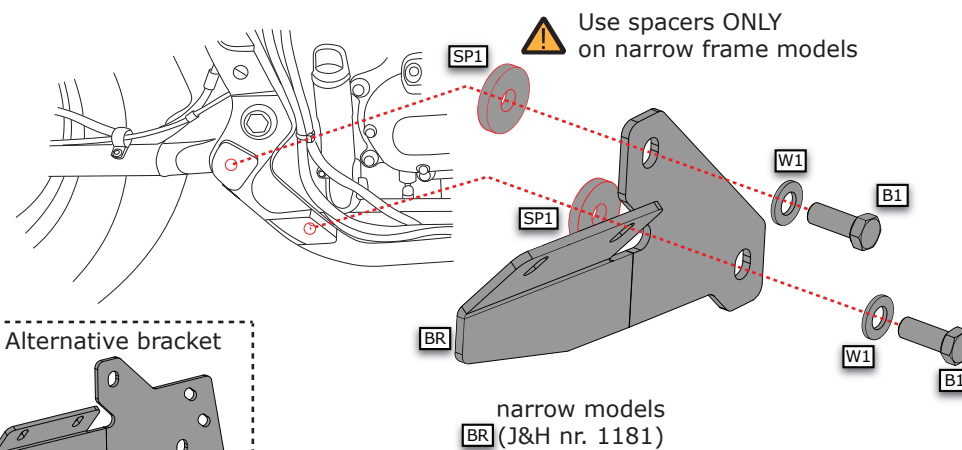

Alternative bracket

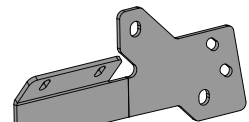

for wide models only
BR (J&H nr. 1184)

narrow models
BR (J&H nr. 1181)

Softail (2018->) Twenty-One Mounting Manual

